

User Manual

PROSE RADIANT

IM2U+NEU+IRU-O System

Manual Version 1.8

Dec 12, 2024

**No part of this documentation may be
excerpted, reproduced, translated, annotated or duplicated.**

**In any form or by any means
without the prior written permission of PROSE Technologies Co., Ltd**

Contents

Introduction	1
1. Safety instructions.....	2
2. System Introduction.....	5
2. Product Introduction	7
2.1 Product Outline Drawing and Description	7
2.1.1 IM2U.....	7
2.1.1.1 IM2U Exterior	7
2.1.1.2 IM2U Ports	9
2.1.1.3 IM2U Configuration.....	12
2.1.2 NEU	12
2.1.2.1 NEU Exterior.....	12
2.1.2.2 NEU panel	13
2.1.2.3 NEU Configuration	15
2.1.3 IRU-O indoor Type	16
2.1.3.1 IRU-O Exterior	16
2.1.3.2 IRU-O	17
2.1.3.3 IRU-O indoor Type Configuration	18
2.2 Product Version	19
2.3 Product Specifications	19
2.3.1 IM2U.....	19
2.3.2 NEU	20
2.3.3 IRU-O	21
3. Installation	22
3.1 Installation Preparation	22
3.1.1 Select one site location.....	22
3.1.2 Installation tools.....	22
3.2 Installation steps	23
3.2.1 Installation.....	23
3.2.2 Installation of IM2U	23
3.2.2.1 Installation Scenarios.....	23
3.2.2.2 Installing an IM2U in cabinet.....	23
3.2.3 Installation of NEU	26
3.2.3.1 Installation Scenarios.....	26
3.2.3.2 Installing an NEU on a wall.....	26
3.2.3.3 Installing a NEU in the cabinet.	28
3.2.4 Installation of IRU-O	30
3.2.4.1 For Ceiling Applications	30
3.2.4.2 For Pole or Mast Applications.....	31
3.2.4.3 For Wall Applications.....	31

Remove Steps.....	32
Line Diagram	32
3.3 Installation standard	35
3.3.1 Device installation	35
3.3.2 Jumper and connector.....	35
3.3.3 Power source	35
3.3.4 The patch cord.....	35
3.3.5 Fiber connection between IM2U to NEU to IRU-O	36
3.3.5.1 Ports introduction.....	36
3.3.5.2 RF Connections between IM2U and BTS	38
3.3.5.3 Fiber Connections between IM2U and NEU	39
3.3.5.4 Connections between NEU and IRU	39
4. Device configuration.....	40
4.1 PC configuration.....	40
4.2 Parameter description.....	41
4.2.1 IM2U.....	41
4.2.2 NEU	44
4.2.3 IRU-O	46
5. Support and service	49
5.1 Type of Service	49
5.1.1 Remote technical support	49
5.1.2 On-site technical support.....	49
5.1.3 Spare parts service.....	49
5.1.4 Field technical training.....	49
5.2 Contact us.....	49

Introduction

As the requirement for mobile communication quality keeps enhancing, the operators of wireless network need to pay more attention to improve the network quality and expand the network coverage. Due to the change of electromagnetic environment and increase of mobile subscribers, those existing BTS may be unable to meet the specified performance requirements and the following coverage problems will occur:

1. High call-drop rate
2. Low rate of successful handover
3. Low coverage rate or bad coverage quality
4. Low connection rate
5. Bad conversation quality

To solve all these problems in an all-around way, only adjusting the cell parameters of the BTS is not enough. The adoption of “BTS + Repeaters” is a better solution that has been verified in many sites in village, highway and tourism regions, especially at the edge of a BTS coverage region. And since the repeater requires fewer accessories and no need special equipment-room, operators can get more profit from lower construction and operation cost.

PROSE RADIANT is a multi-standards integration system, which has integrated 4G/5G and support for broadband access to this system. This system mainly consists of four parts. Repeater is especial tailored to provide a comprehensive and flexible coverage solution in complex coverage environments like densely populated residential area, underground areas, tunnels, stations and terminals, Hotels, Meeting rooms and shopping mall and so on. It widely used on the mobile communication networks. The system receives filters, amplifies, and transfers the uplink and downlink radio frequency (RF) signals of the base transceiver station (BTS) to extend and accurately distribute the coverage of the BTS.

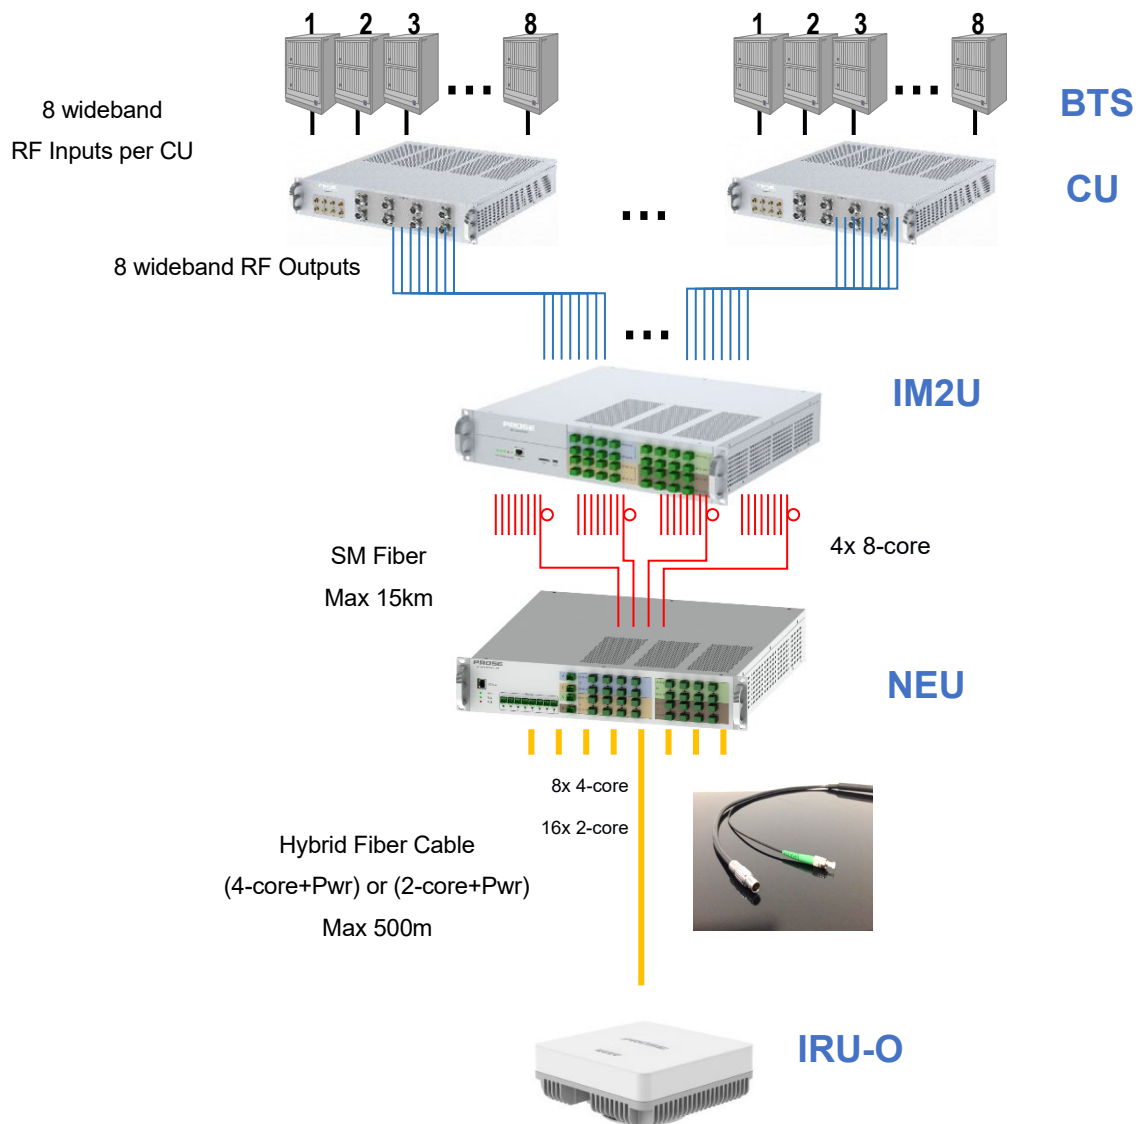


Figure 1-1 Functional Components of PROSE RADIANT

1. Safety instructions

It is important to read safety instructions before installing the equipment. These instructions are supplementary to any local safety regulations in place. In case of any conflict, local safety regulations shall prevail.

Installation personnel should have preliminary knowledge about safety operations and must have received training on PROSE equipment installation, maintenance and operations.

Some important safety instructions are discussed in the chapter. PROSE shall not bear any liabilities incurred by violation of universal safety operation requirements, or violation of safety standards for designing, manufacturing and equipment usage.



1. The equipment must follow system requirements with proper grounding & lightning protection.



2. Power supply voltage must satisfy safety requirements. Anybody who installs or modifies equipment must turn off the power supply first. Only certified maintenance staff are allowed to perform operations with power-on.



3. The equipment radiates electromagnetic waves, which can cause damage to the human body. Proper safety and precautions should be taken. People other than maintenance staff should keep away.



4. Do not expose yourself for long periods of time to the FOR system while in operation because the electromagnetic field emitted by the equipment may do harm to your health.



5. If installed at height (onto the pole), the equipment shall be securely fixed to prevent harm and bodily injury from dropping parts.



6. The equipment must be away from fire, as electronic components may explode upon fire.



7. Static electricity produced by human body can damage sensitive components on the circuit board, such as large integrated circuits (ICs).

8. **Warning:** The equipment contains a battery that only can be replaced by a professional. There is risk of explosion if the battery is replaced by an incorrect type.



CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

9. EU Conformity Statement



Hereby, PROSE Technologies (Suzhou) Co., Ltd declares that the radio equipment type IRU-O-XX-XX / NEU-XFXXF-XX / IM2U-NXX-XX is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

www.address.com/DoC.pdf

10. RF Exposure Information

This device has been tested and meets applicable limits for Radio Frequency (RF) exposure.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

2. System Introduction

Overview

PROSE's solution of RADiAnt system supports multiple operators deploying multiple mobile technologies. The RADiAnt system operates from 698-3980MHz and extends 4G, 5G and broadband data coverage for indoor applications. It is particularly suited for high-capacity application scenarios such as business towers, shopping malls, offices, airports, stadiums, and other indoor application scenarios.

The RADiAnt is much more than just replacing RF coaxial cables with optical fibers. The core of the system, consisting of the intelligent Multisector Master Unit (IM2U) and the Network Extender Unit (NEU), deals with the signal processing and the conversion of RF signals to optical. The optical signals are transmitted over single mode fiber with low loss and virtually no increased in noise floor. The NEU uses hybrid cable (an integrated power and fiber cable) to connect to the integrated Remote Unit (IRU-O), where each NEU can connect 16 units of IRU-O for SISO, and 16 units of IRU-O for 2x2 MIMO, and 8 units of IRU-O for 4x4 MIMO applications. IRU-O is designed to apply for indoor and outdoor environment. The IRU-O outdoor type meets IP65. It had two types, one is combiner build in type, the other one is without combiner type. The different are the dimension, weight, and output ports definition. If multiple operators accessing, the Intelligent Multi-Sector Master Unit (IM2U) is recommended for power level aligning.

The advantages of the RADiAnt system are:

- Easy and quick to design and deploy Fiber DAS, where RF radiated power is determined only by each IRU-O
- Achieve uniformed coverage, each IRU-O provides constant output power for each band
- Precisely adjust the RF output power level in specific applications
- Zero RF loss in signal transmission
- No PIM and VSWR issues
- One IM2U connects a maximum of 16 NEUs, and one NEU connects up to 16 IRU-Os for 2x2 MIMO solution, 8 NEUs and one NEU connects up to 8 IRU-Os supports 4X4 MIMO as well
- The system can flexibly configure each Power Amplifier (PA): On/Off, SISO or MIMO with the timed tasks via software to maximal reduce the power consumption of the system in a long term according to the real usage.
- Management via OMC/OMT or NMS software

Application

DAS vendors are working towards a more flexible ecosystem that allow mobile operator and landlords to maximize their Return on Investment (ROI) from their DAS deployments. PROSE's Smart active DAS is the latest DAS system that is multi-operator, multi-band, and multi-technology operating See Below:

LTE Band 5:869MHz to 894MHz

LTE Band 12:729MHz to 746MHz

PROSE RADIANT IM2U+NEU+IRU-O System

LTE Band 13:746MHz to 756MHz

LTE Band 25:1930MHz to 1995MHz

LTE Band 66:2110MHz to 2200MHz

5GNR N41:2500MHz to 2690MHz

5GNR N77:3700MHz to 3900MHz

In the NR C-band, the system can support 400 MHz Instantaneous Bandwidth (IBW) and 4T4R with one of the smallest footprints in market. It can support various MIMO configurations (e.g., Single Input, Single Output (SISO), 2x2 MIMO and 4x4 MIMO) with up to eight bands by a low-power iRU.

RADiAnt

The following system diagram shows a typical system connectivity of RADiAnt. The mainly components of RADiAnt are the CU, IM2U, NEU and IRU-O.

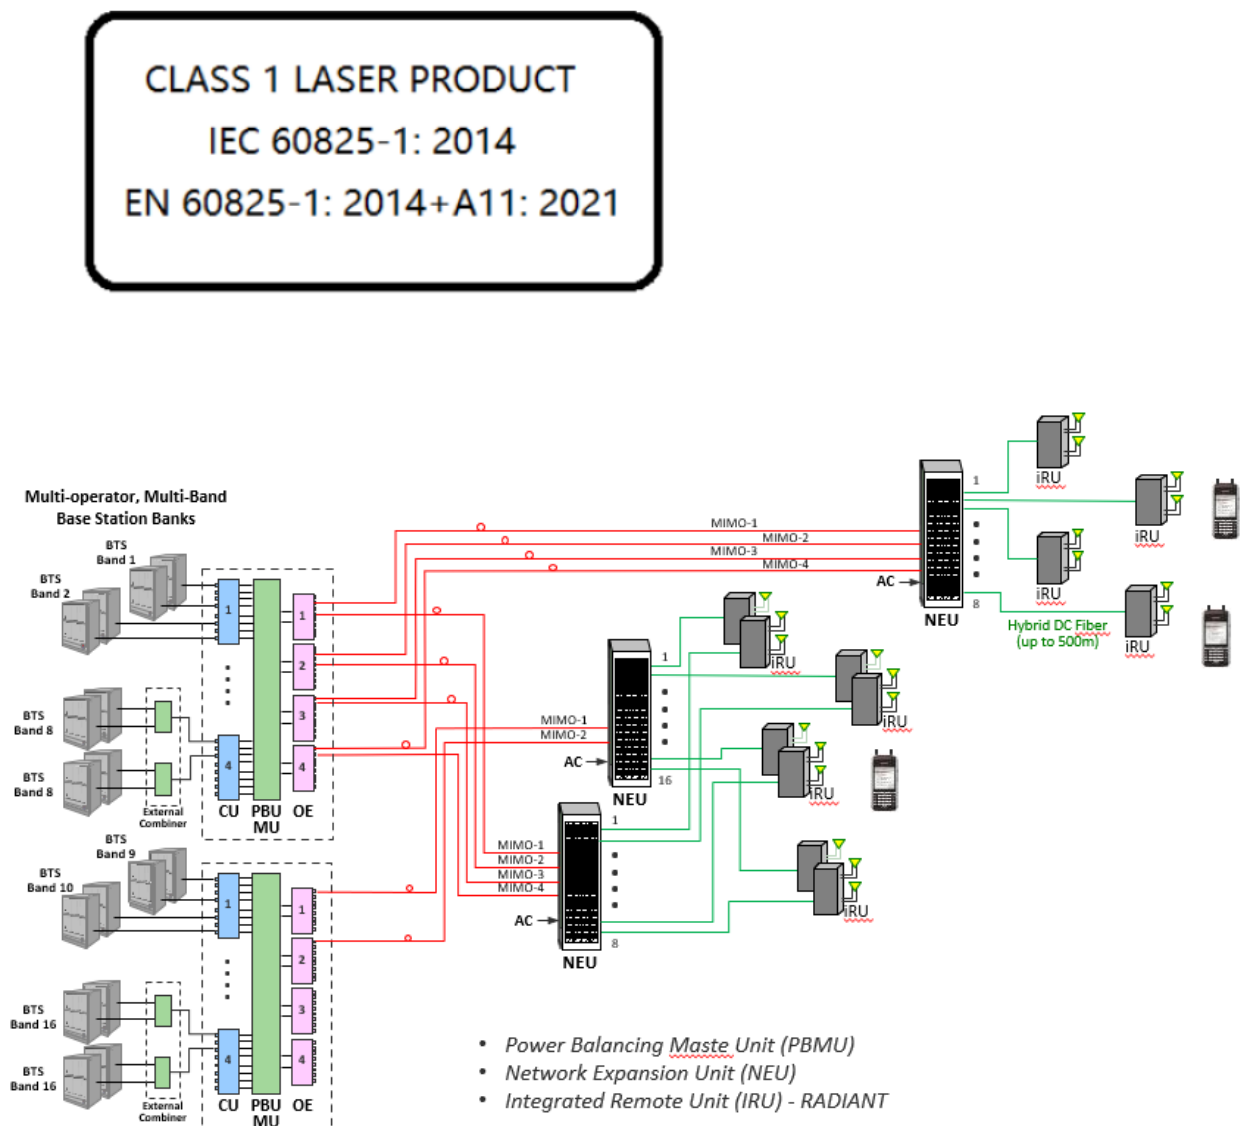


Figure 1-2 System application diagram

2. Product Introduction

Overview

System consists of IM2U, NEU and IRU-O.

Interconnection between IM2U and NEU is fiber optical cable via optical module.

Interconnection between NEU and IRU-O is fiber & power hybrid cable via optical module.

All IM2U and NEU units are equipped with internal batteries to ensure alarms are maintained in the event of a power failure, for a minimum of 20 minutes. And batteries automatically recharge.

To meet high reliability requirements, IM2U and NEU will be provided with UPS/battery systems to ensure hot backup support for both AC and DC power. These units will continue to operate normally even when AC or DC power is lost.

Optical interface supports 690-4000MHz band.

2.1 Product Outline Drawing and Description

2.1.1 IM2U

2.1.1.1 IM2U Exterior



Figure 2-1 IM2U exterior

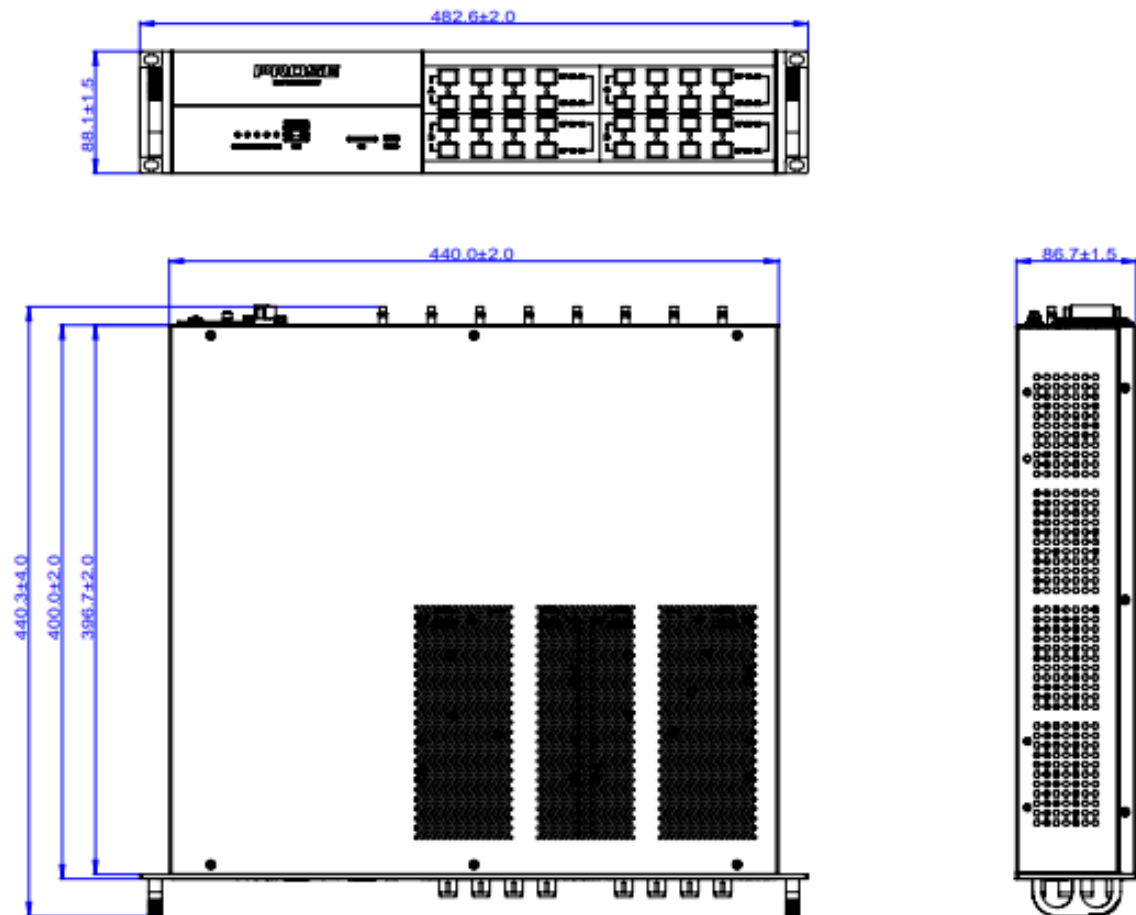


Figure 2-2 IM2U dimensions

2.1.1.2 IM2U Ports

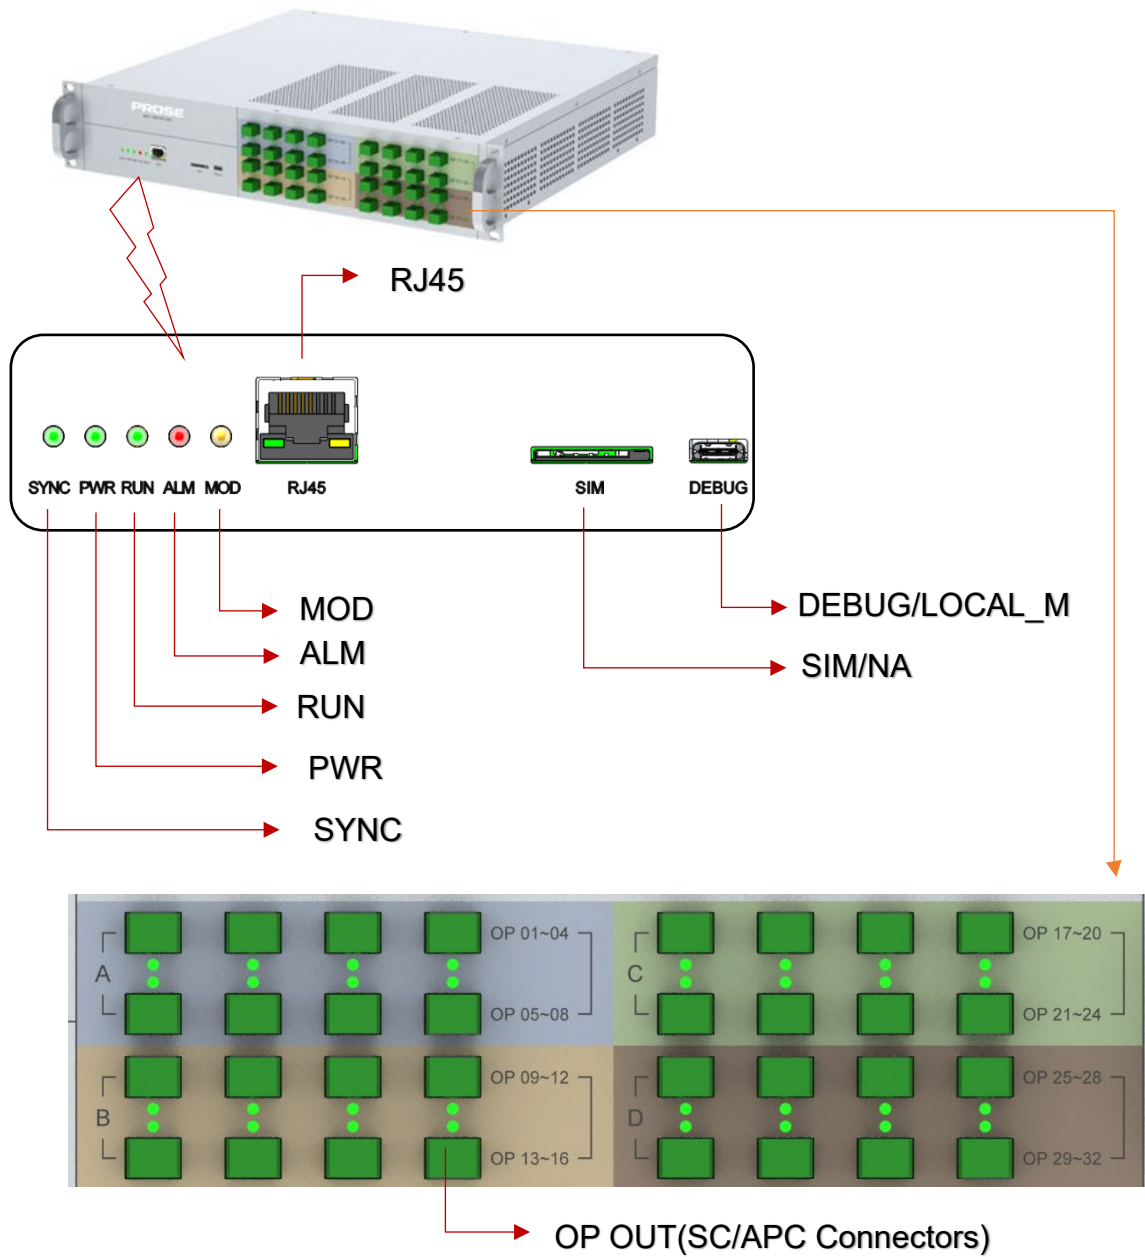


Figure 2-3 Ports in the IM2U front panel

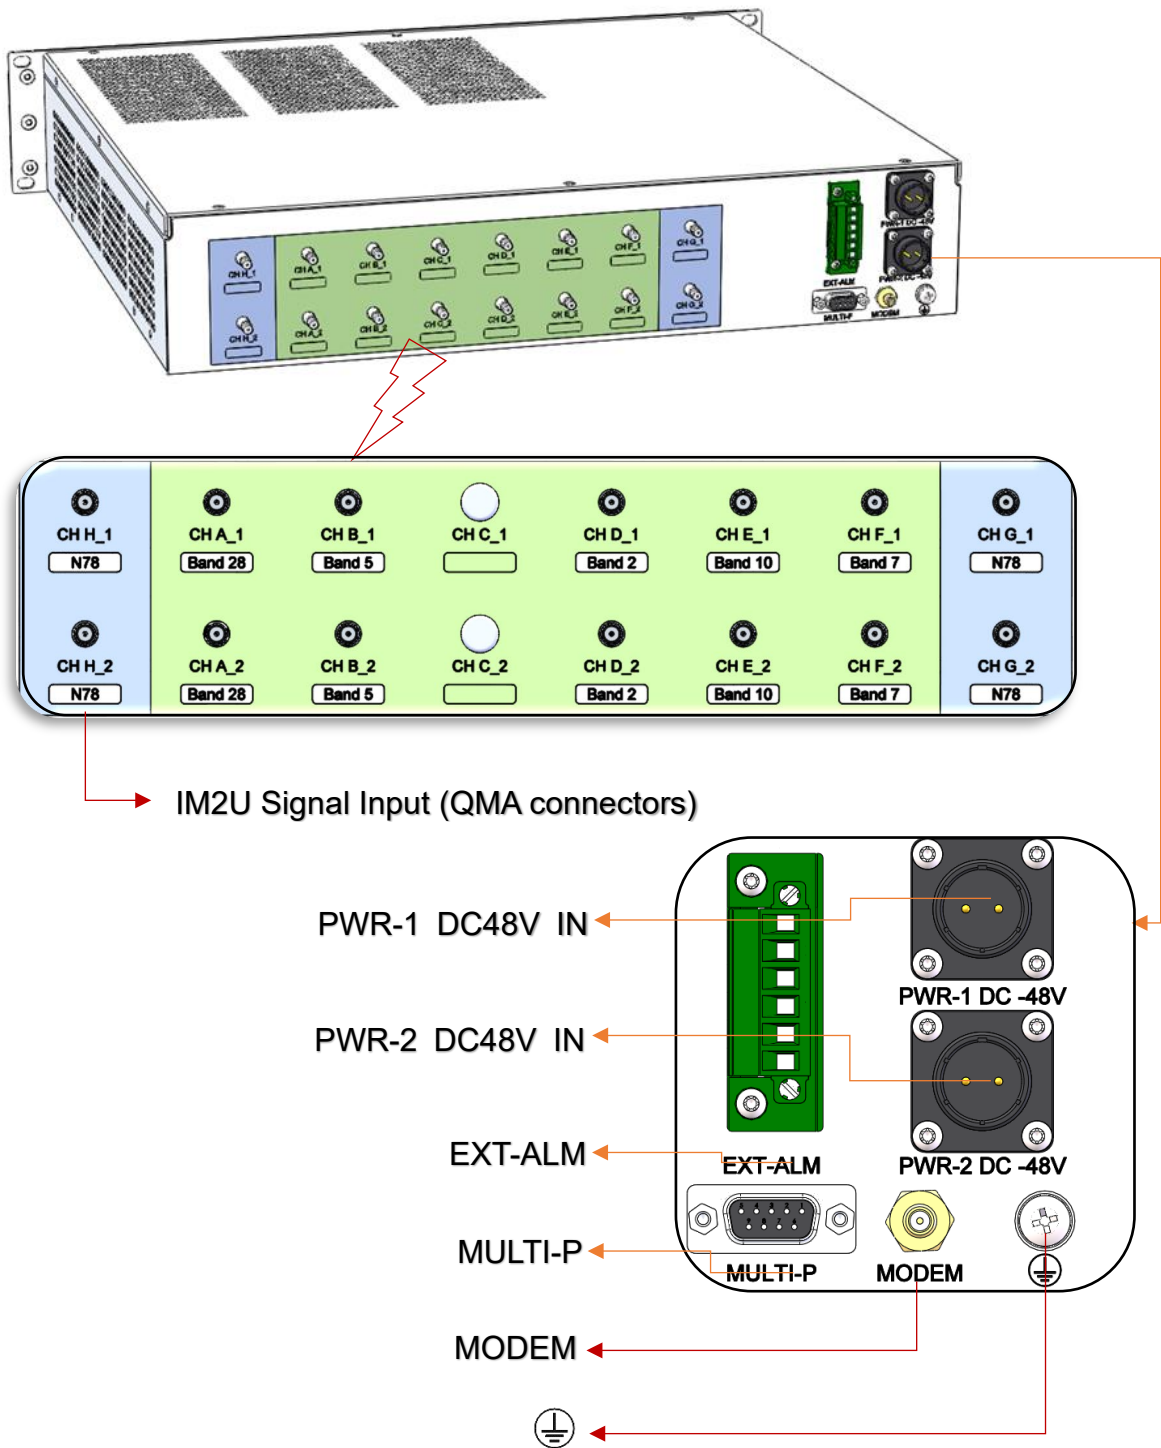
**Figure 2-4** Ports in the IM2U rear panel

Table 2-1 Ports and indicators on the IM2U panels

Item	Silkscreen	Remarks
(IM2U) Ports in the front panel	RJ45	Network interface
	SIM	Insert SIM card
	A OP 01~04 OP 05~08	Signal output, connect with optical fiber line
	B OP 09~12 OP 13~16	Signal output, connect with optical fiber line
	C OP 17~20 OP 21~24	Signal output, connect with optical fiber line
	D OP 25~28 OP 29~32	Signal output, connect with optical fiber line
Item	Silkscreen	Remarks
(IM2U) Ports in the rear panel	PWR-1 DC48V	DC48V Power input 1
	PWR-2 DC48V	DC48V Power input 2
	GND	NEU equipment grounding
	MODEM	Connect the MODEM
	DB9	DB9
	EXT-ALM	Alarm extension
	CH(A~B)_1 (NR78, Band 28.....)	IM2U Signal Input (QMA connectors). Frequency can be configured according to the product before delivery
	CH(A~B)_2 (NR78, Band 28.....)	IM2U Signal Input (QMA connectors). Frequency can be configured according to the product before delivery

Table 2-2 IM2U indicators

Indicator	Color	Status	Meaning
SYNC	Green	Steady off	5G or 4G TDD signals are out of sync
		Steady on	5G or 4G TDD signal synchronization
PWR	Green	Steady on	The power input is available
RUN	Green	Blinking	The software works fine
		Steady on or off	Software operating abnormally or no power
ALM	RED	Steady on	The system has alarm
		Steady off	The system has no alarm
MOD	Green	Blinking	Motherboard MODEM in network
		Steady off	Motherboard MODEM is offline

2.1.1.3 IM2U Configuration

There are several kinds of configurations for IM2U according to customer requirements.

- 1) The communication ports named with “DUBGE” or “LOCAL_M”.
- 2) The SIM card slot exist or not.
- 3) Optical ports quantity 32 or 16 or 8.
- 4) Port “MODEM” on real panel exist or not.

2.1.2 NEU

2.1.2.1 NEU Exterior

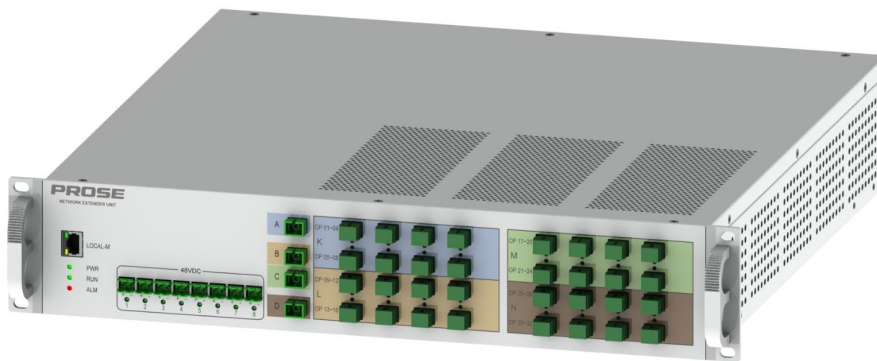


Figure 2-5 NEU exterior

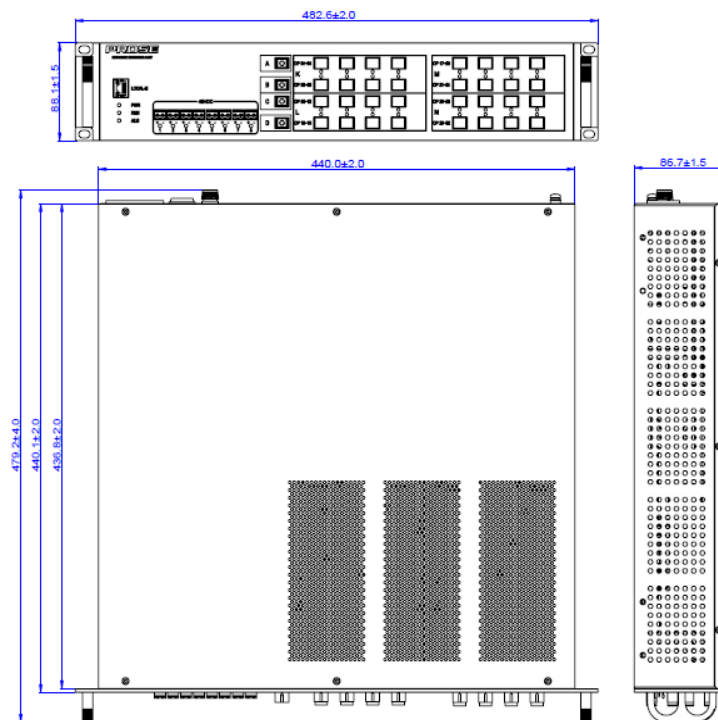


Figure 2-6 NEU dimensions

2.1.2.2 NEU panel

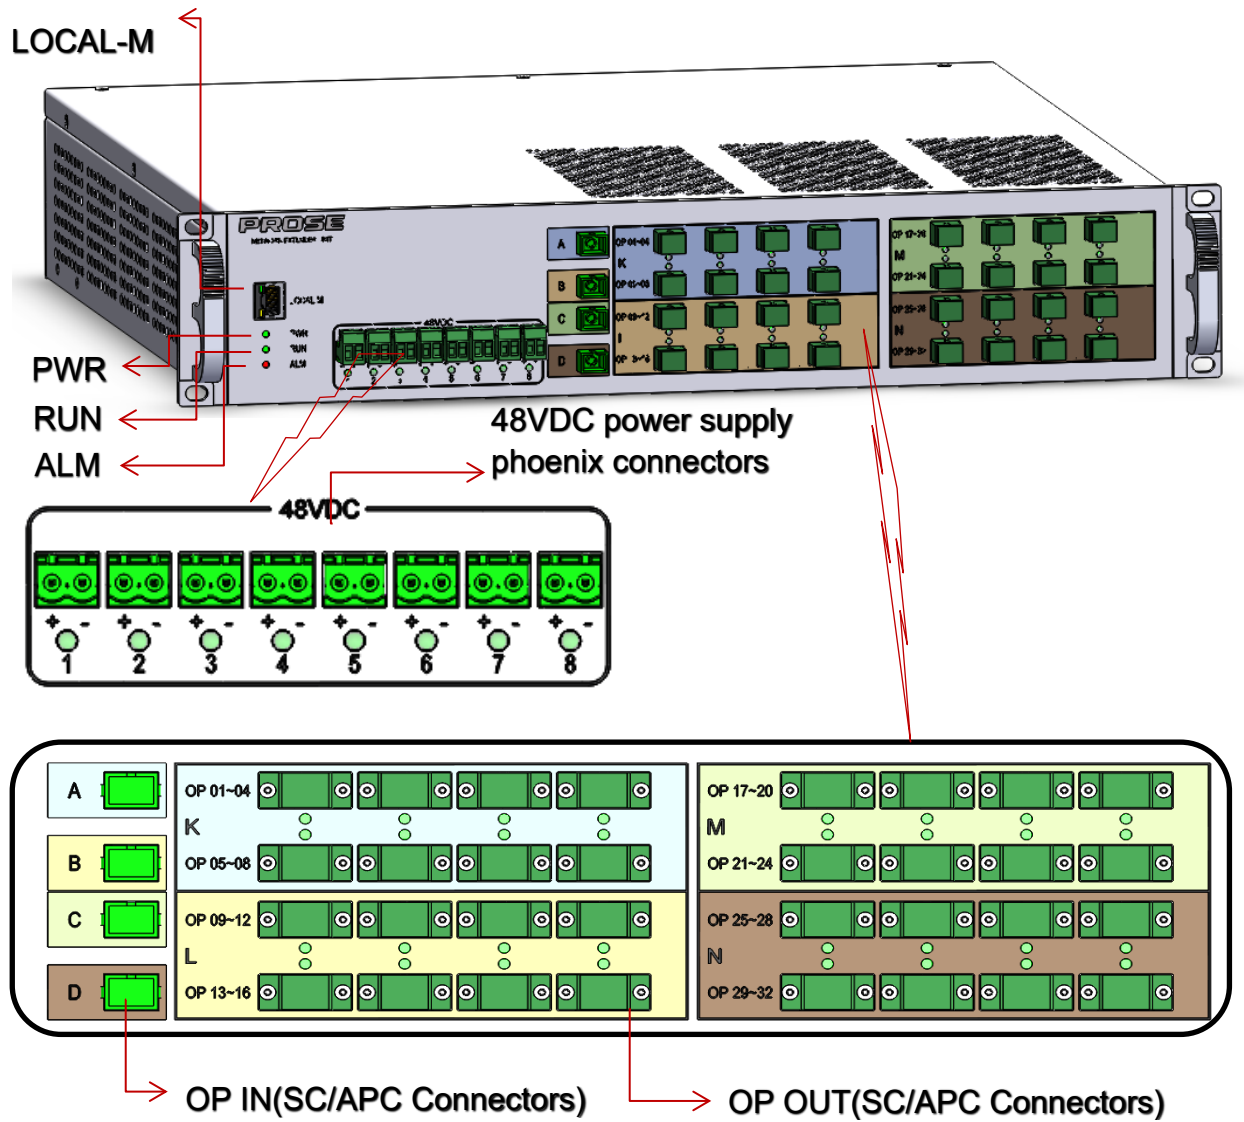


Figure 2-7 Ports in the NEU front panel

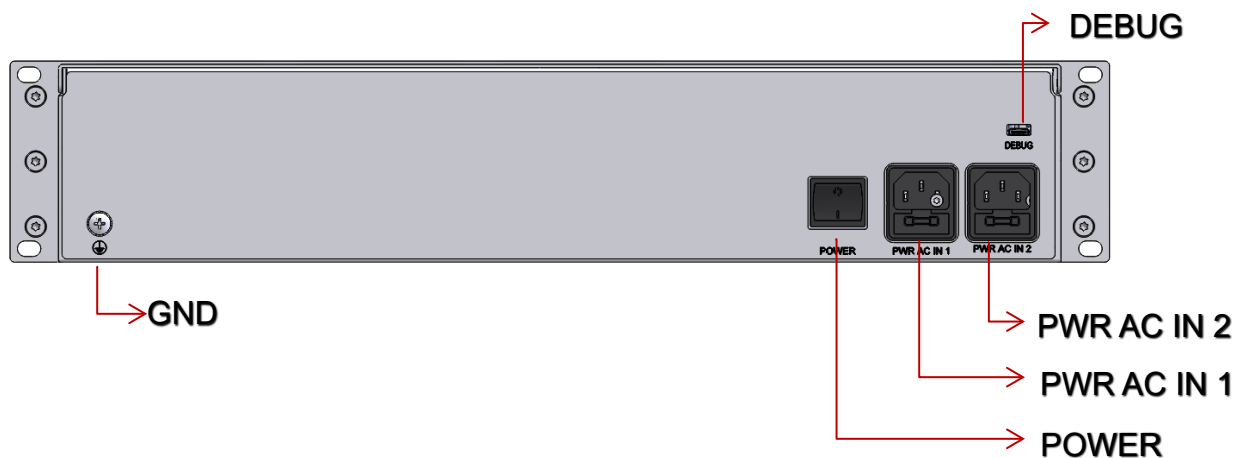


Figure 2-8 Ports in the NEU rear panel

Table 2-3 Ports and indicators on the NEU panels

Item	Silkscreen	Remarks
(NEU) Ports in the rear panel for old version	DEBUG	Debugging interface
	POWER	Power switch
	PWR AC IN 1	AC Power input 1
	PWR AC IN 2	AC Power input 2
	GND	NEU equipment grounding
Item	Silkscreen	Remarks
(NEU) Ports in the front panel for old version	48 VDC (1~8)	48 VDC power supply for IM2U
	Local_M	RJ45 interface
	A/B/C/D	4 x Signal input, connect with optical fiber line
	K OP 01~04 OP 05~08	Signal output, connect with optical fiber line
	L OP 09~12 OP 13~16	Signal output, connect with optical fiber line
	M OP 17~20 OP 21~24	Signal output, connect with optical fiber line
	N OP 25~28 OP 29~32	Signal output, connect with optical fiber line

Table 2-4 NEU indicators

ITEM	Indicator	Color	Status	Meaning
NEU Monitoring board	PWR	Green	Steady on	The power input is available
			Steady off	No power input is available
	RUN	Green	Blinking	The software works fine
			Steady on or off	Software operating abnormally or no power
	ALM	Red	Steady on	No alarms are generated
			Steady off	The system has no alarm

2.1.2.3 NEU Configuration

There are several kinds of configurations for NEU according to customer requirements.

- 1) The communication ports named with “DUBGE” or “LOCAL_M”;
- 2) DC-48V power supply ports quantity 8 or 16;
- 3) Optical ports (OP IN) quantity 4 or 2.

2.1.3 IRU-O indoor Type

2.1.3.1 IRU-O Exterior



Figure 2-9 IRU-O exterior

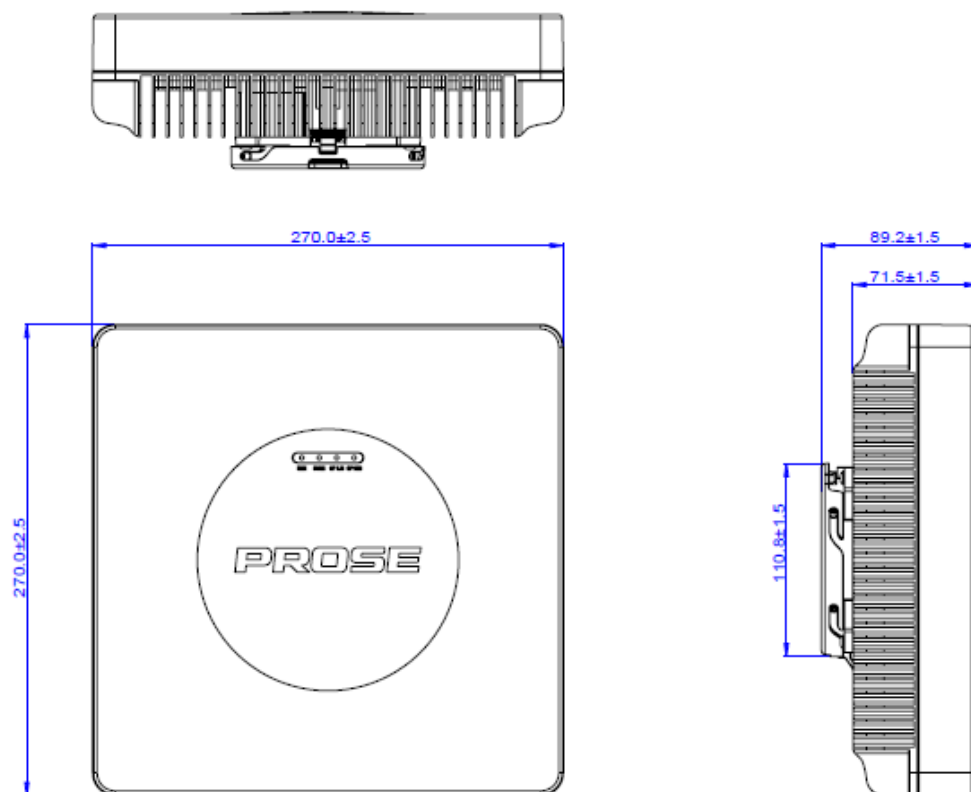
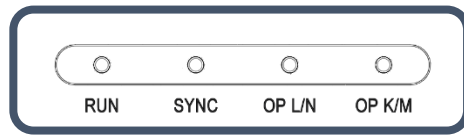
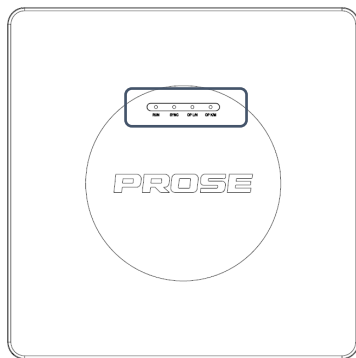
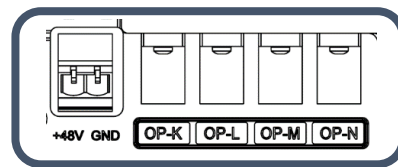
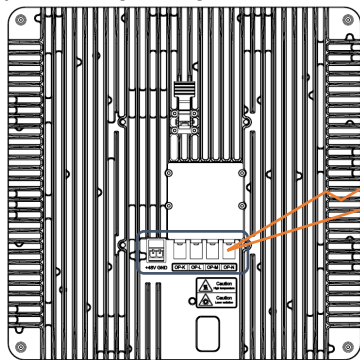




Figure 2-10 IRU-O dimensions

2.1.3.2 IRU-O**a) Front View**

- Optical indicators
- Optical indicators
- Mode indicators
- Running indicators

b) Four optical ports rear view

- Optical port
- Power port

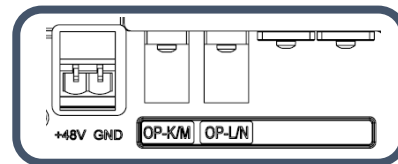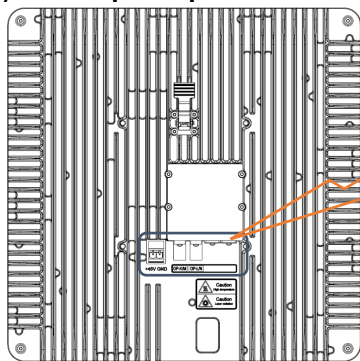c) Two optical ports rear view

- Optical port
- Power port

Figure 2-11 Ports on IRU-O panel

Table 2-5 IRU-O indicators

ITEM	Indicator	Color	Status	Meaning
Ports in the top panel	OP K/M	Green	Blinking quickly (frequency 1s)	The optical power received of port K is normal.
			Blinking Slowly (frequency 4s)	The optical power received of port M is normal.
			Steady on	The optical power received of port K and port M are all normal.
			steady off	The optical power received of port K or port M is abnormal or lower than the detecting range.
	OP L/N	Green	Blinking quickly (frequency 1s)	The optical power received of port L is normal.
			Blinking Slowly (frequency 2s)	The optical power received of port N is normal.
			Steady on	The optical power received of port L and port N are all normal.
			steady off	The optical power received of port L or port N is abnormal or lower than the detecting range
	SYNC	Green	Steady on	IRU-O synchronizes with the BTS successfully in TDD mode working.
			steady off	IRU-O is out of synchronization with the BTS in TDD mode working or no TDD mode.
	RUN	Green	Blinking (frequency 1s)	IRU-O is running normally.
			Steady on	IRU-O is running abnormally.
			Steady off	No power or no running

2.1.3.3 IRU-O indoor Type Configuration

There are 2 kinds of configurations for IRU-O indoor type according to customer requirements with optical port quantity 4 or 2.

2.2 Product Version

Product Number	Hardware version	Software version
IRU-O-XX-XX	IRU1011	M52HIRUC8ND8SX0
NEU-XFXXF-XX	NEU1103	M20PNEUCX03FH20
IM2U-NXX-XX	IM2U1103	M20PPMUCX03LH20

2.3 Product Specifications

2.3.1 IM2U

	Uplink	Downlink
Frequency	Can be customized	
Gain	-5 ± 2 dB	-5 ± 2 dB
Ripple in Band	≤ 3.5 dB	≤ 3.5 dB
RF Output Power	≤ -10 dBm (RF)	---
Optical Power	---	0 ± 1 dBm (O/P)
VSWR	≤ 2.0:1	≤ 2.0:1
Max. Non-destructive Input Power	---	10 dBm
Impedance	50 Ω	50 Ω
Optical Wavelength	1310 nm	1550 nm
Gain Control Range	15 dB / 1 dB step, separate for each path	15 dB / 1 dB step, separate for each path
Power Supply(dual-DC input)	DC -48V ± 10%	
Power Consumption	≤ 60 W	
Operating temperature range	-10°C to +45°C	
Storage temperature range	-40°C to +85°C	
Relative humidity	10% - 95%	
Ingress protection	IP40 for indoor	
Cooling	Nature cooling	
Dimensions	483 x 400 x 88 mm (2U 19" Rack)	
Weight	≤ 10 Kg	
Optical connector	8 sets x SC/APC (5G 4x4 MIMO)	
	16 sets x SC/APC (4G 2x2 MIMO)	
RF connector	TX/RX: 16 x QMA-Female	
Installation	19" Rack Mounting	
Environment Protections	RoHS	

2.3.2 NEU

	Uplink	Downlink
Frequency	690- 4000 MHz	690 - 4000 MHz
System gain	0 ± 2 dB	0 ± 2 dB
Ripple in band	≤ 1.5 dB	≤ 1.5 dB
Optical Output power	9 ± 1 dBm (O/P)	0 ± 1 dBm (O/P)
Optical wavelength	1310 nm	1550 nm
Power supply(dual-AC input)	AC110~240V, 50/60Hz	
DC power output	43 - 57 VDC	
Power Consumption	≤ 90 W (No-load, without IRU-O connection)	
Operating temperature range	-10°C to +45°C	
Storage temperature range	-40°C to +85°C	
Relative humidity	10% - 95%	
Ingress protection	IP40 for indoor	
Cooling	Nature cooling	
Function Supported	Over current protection	
	Over temperature protection	
	Overload protection	
	Short circuit protection	
	Low voltage protection	
Dimensions	483 x 440 x 88 mm (2U 19" Rack)	
Weight	≤ 12 Kg	
Fiber optical connectors	32 x SC/APC (to IRU)	
	4 x SC/APC (to IM2U)	
Mounting	Wall or rack	

2.3.3 IRU-O

		Uplink	Downlink
Frequency	Band 1 (2x2 MIMO)	1920 - 1980 MHz	2110 - 2170 MHz
	Band 3 (2x2 MIMO)	1710 - 1785 MHz	1805 - 1880 MHz
	Band 41/n41 (4x4 MIMO)	2500 - 2690 MHz	2500 - 2690 MHz
	N77 (4x4 MIMO)	3700 - 3900 MHz	3700 - 3900 MHz
Gain	Band 1/3/41	31 ± 2 dB	31 ± 2 dB
	n77	34 ± 2 dB	34 ± 2 dB
RF output power	Band 1/3	---	21 dBm (RF per band per port)
	Band 41	---	24 dBm (RF per band per port)
	n77	---	27 dBm (RF per band per port)
Antenna gain		3 dBi @ 1.7-2.7GHz	3 dBi @ 1.7-2.7GHz
		5 dBi @ 3.3-3.9GHz	5 dBi @ 3.3-3.9GHz
Ripple in band		≤ 3.5 dB	≤ 3.5 dB
Optical output power		9 ± 1 dBm	---
Gain control range		15 dB / 1 dB step	15 dB / 1 dB step
ALC control		10 dB overdrive protection	10 dB overdrive protection
Intermodulation & Spurious Emission Mask		Meets 3GPP TS 25.106 for UMTS, 3GPP TS 36.106 for LTE, 3GPP TS 38.106 for NR	
Transmission delay		≤ 1 μS	≤ 1 μS
EVM (256QAM)		≤ 3%	≤ 3%
Spurious emissions (Out of band)		≤ -36 dBm/9 KHz ~ 1 GHz	≤ -36 dBm/9 KHz ~ 1 GHz
		≤ -30 dBm/1 GHz ~ 12.75 GHz	≤ -30 dBm/1 GHz ~ 12.75 GHz
Max. non-destructive input power		-10 dBm	---
Impedance		50 Ω	50 Ω
Optical wavelength		1310 nm	1550 nm
Power supply		40 - 57 VDC	
Power Consumption		≤ 90 W @ Typical*	
Operating temperature range		-10 °C to +45 °C	
Storage temperature		-40°C to +85°C	
Relative humidity		10% - 95%	
Ingress protection		IP50	
Monitoring and control		remote control via IM2U	
Dimensions		270 x 270 x 71 mm	
Weight		≤ 4 kg	
Optical connector		4 x SC/APC (4x4 MIMO port)	
Installation		Ceiling or wall or pole mounting	
Antenna		Omni antenna Integrated	

Note: * Typical environment: room temperature, 57VDC, 50% load.

3. Installation

3.1 Installation Preparation



This chapter introduces installation and commissioning flow of the equipment to help installation personnel understand the entire process. Brief introduction to some physical parameters of repeater, such as size, weight, humidity and temperature is also included in this chapter.

3.1.1 Select one site location

1. Make sure access is restricted to qualified personnel
2. Install the product where power supply and feeder cables are accessible.
3. Site location should be far away from heat source and damp environment.
4. Make sure can get the power supply near the site, and the power voltage is stable.
5. Make sure the grounding is well, and lightning protection is good.

3.1.2 Installation tools

You must prepare the following tools and instruments before the installation.

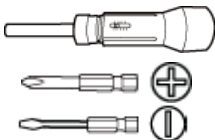Item	Description	Remark
1	Torque screwdriver kit (Cross head and flat-head M5)	
2	Safety gloves	
3	Safety helmet	
4	Safety goggles	
5	Hammer drill	
6	Rubber Hammer	
7	Marking pen	

8	Wire stripper	
9	Pliers	
10	Measuring tape	
11	Multimeter	
12	Flash lights	
13	Measuring tape	

3.2 Installation steps

3.2.1 Installation

Before any installation, check that the device has no visible damages or defects.

3.2.2 Installation of IM2U

3.2.2.1 Installation Scenarios

An IM2U be installed in cabinet. Installation scenarios must meet heat-dissipation and waterproofing requirements of the IM2U.

3.2.2.2 Installing an IM2U in cabinet

1. Install bracket on the cabinet with the screw. as shown in Figure 3-1. Attention: Please pay attention to mounting of bracket. as shown in Figure 3-2.
2. Push IM2U into the cabinet. as shown in Figure 3-3.
3. Use screw to mount IM2U, as shown in Figure 3-4.
4. Connect the IM2U to terminal box by patch cord, the patch cord connector type is SC/APC to SC/APC or another type for terminal box
5. Connect the ground cable to ground
6. When connect the power, please check the Power voltage in advance, and need a breaker to protect the IM2U.

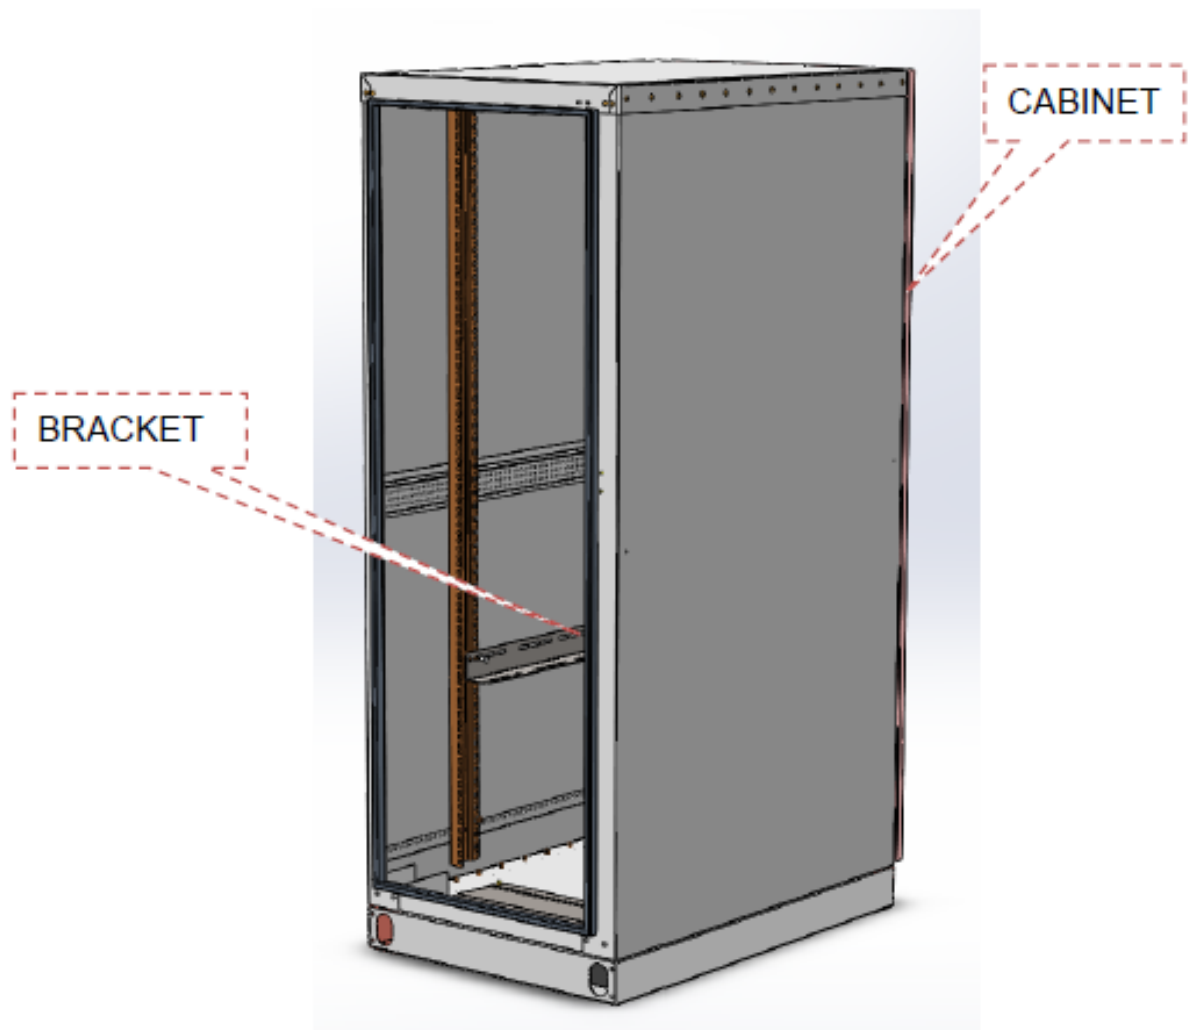


Figure 3-1 pay attention to mounting of bracket.

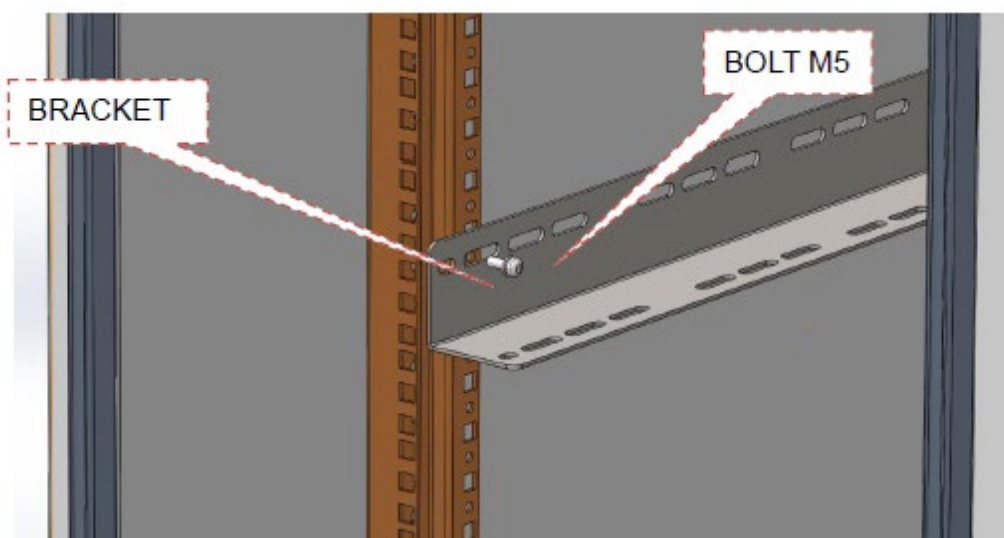


Figure 3-2 Drill holes and Install the Mounting rack on wall

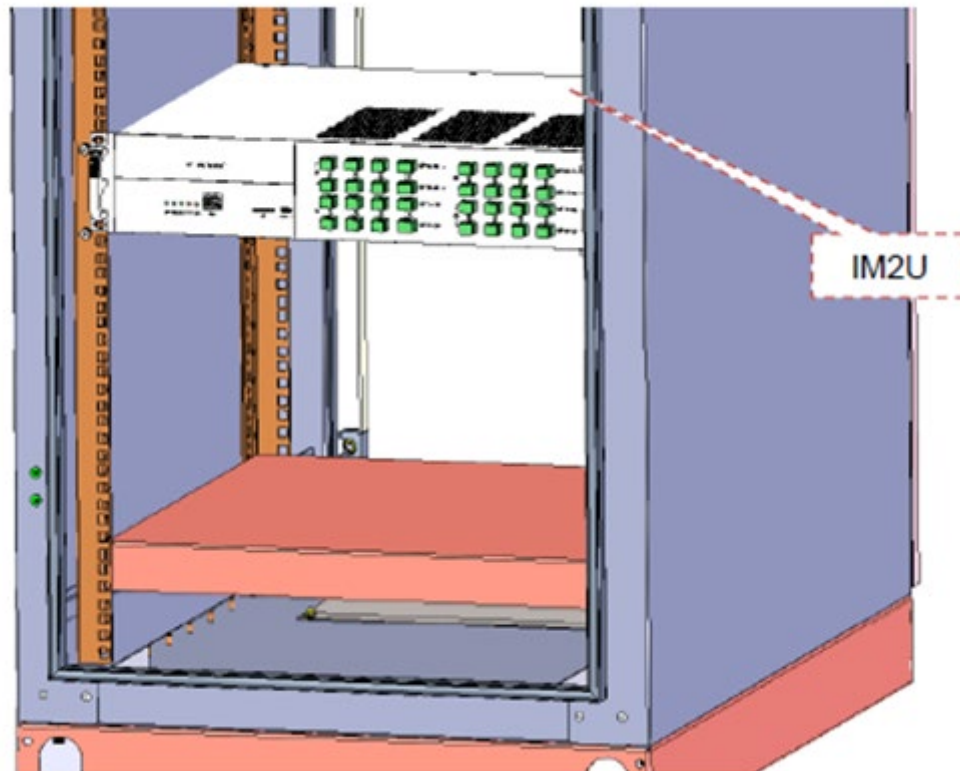


Figure 3-3 Push IM2U into the cabinet.

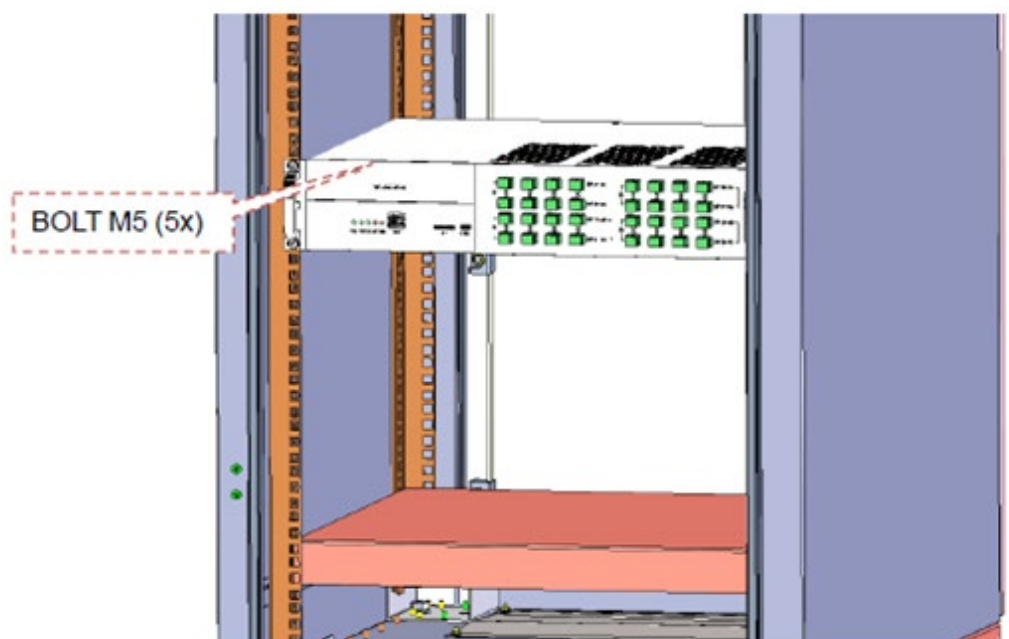


Figure 3-4 Use screw to mount IM2U

3.2.3 Installation of NEU

3.2.3.1 Installation Scenarios

A NEU can be installed on a wall or cabinet. Installation scenarios must meet heat-dissipation and waterproofing requirements of the NEU.

3.2.3.2 Installing an NEU on a wall

1. Check enough space for front and rear door according to Figure 3-5. and make sure the installation location.
2. Fix the mounting rack onto the NEU by tightening with M5x10 reference to Figure 3-6.
3. Choice the hard wall and drawing 4 locating marks for M6x60 expansions bolts reference to Figure 3-7.
4. Drill 4 holes for the expansion bolts reference to the locating mark, put the expansion bolts into the hole and make sure it's tightly reference to Figure 3-8.
5. Fix the NEU onto the mounting rack by tightening the M6x60 expansions bolts using adjustable wrench. Make sure the NEU is tightly fixed to the mounting rack and installation is complete. reference to Figure 3-9.
6. Connect the NEU to terminal box by patch cord, the patch cord connector type is SC/APC to SC/APC or another type for terminal box
7. Connect the ground cable to ground
8. When connect the power, please check the Power voltage in advance, and need a breaker to protect the NEU.

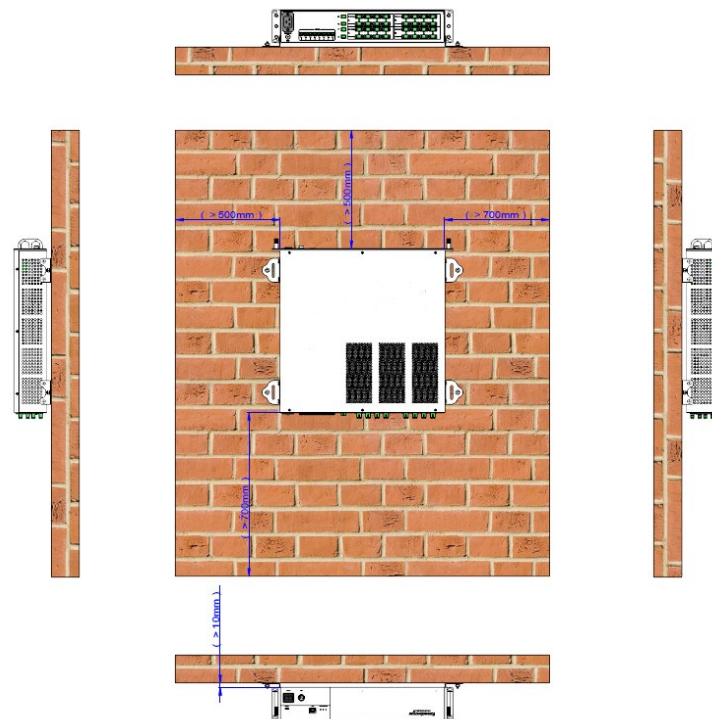


Figure 3-5 Location the holes on the wall

Measure distance between top, bottom, left and right for mounting rack

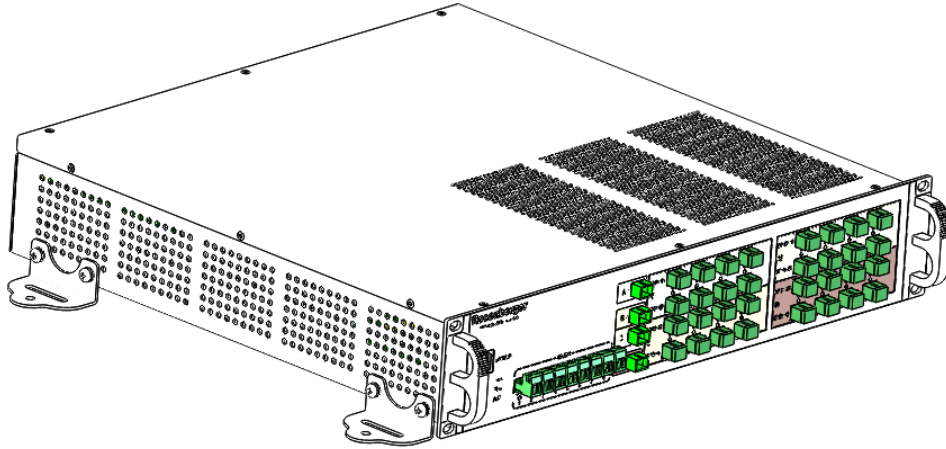


Figure 3-6 Install the mounting support rack

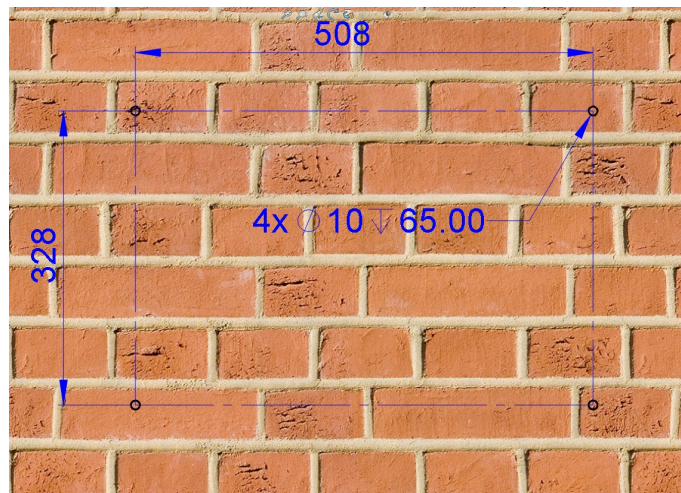


Figure 3-7 Drill holes and Install the Mounting rack on wall

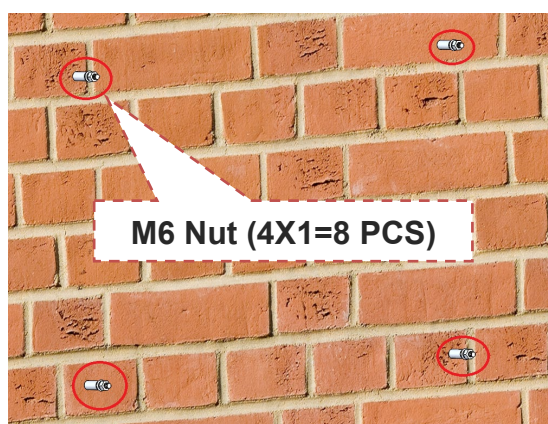


Figure 3-8

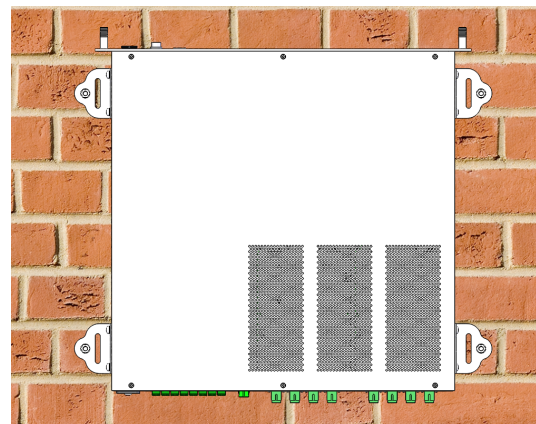


Figure 3-9

3.2.3.3 Installing a NEU in the cabinet.

1. Install bracket on the cabinet with the screw reference to Figure 3-10.

Attention: Please pay attention to mounting of bracket reference to Figure 3-11.

2. Push NEU into the cabinet and use screw to mount NEU reference to Figure 3-12.
3. Connect the NEU to terminal box by patch cord, the patch cord connector type is SC/APC to SC/APC or another type for terminal box
4. Connect the ground cable to ground
5. When connect the power, please check the Power voltage in advance, and need a breaker to protect the NEU.

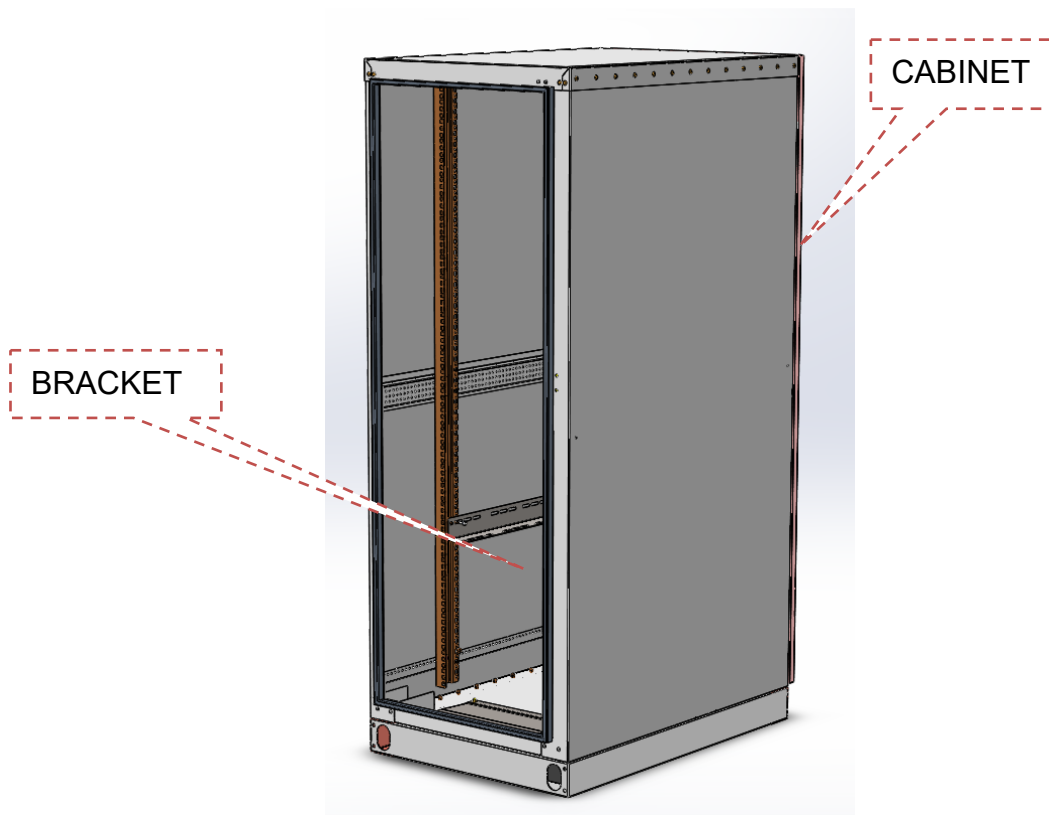


Figure 3-10

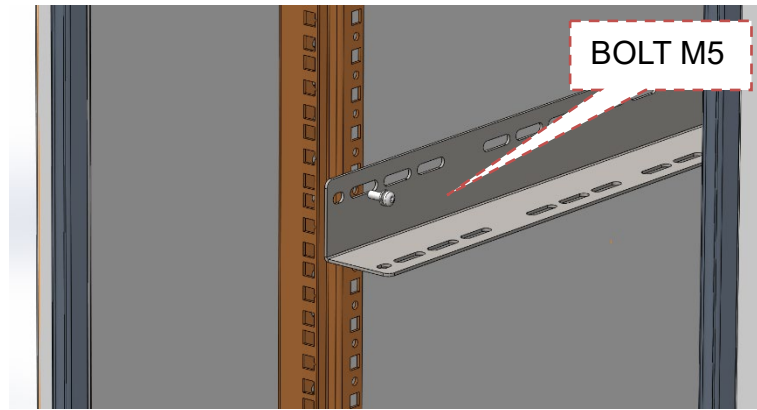


Figure 3-11

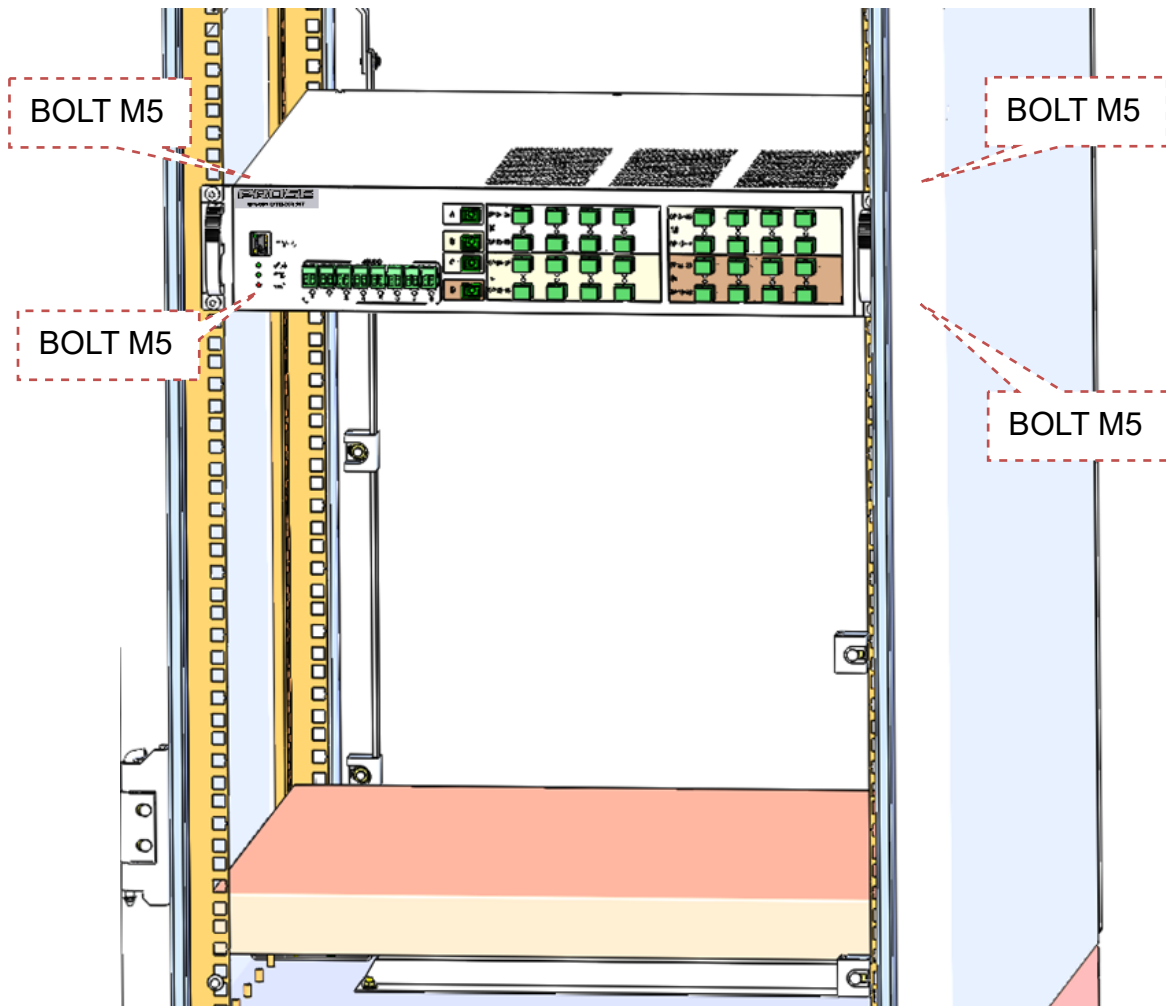


Figure 3-12

3.2.4 Installation of IRU-O

3.2.4.1 For Ceiling Applications

For Ceiling A Applications

Step 1. Select an area for installation near ceiling keel. Drill three holes per (Figure 3-13). Route the screw(M4x50) thru the fastener (Figure 3-14). And the screw from top to bottom thru ceiling mounting hole (Figure 3-15). Place bracket over the screw (M4X50), Adjust the bracket to align the edge of the backplane with the edge of the ceiling. And then use torque screwdriver to tighten the screw to the 1.4N.m (Figure 3-16).

Step 2. Connect the power cable and the fiber cable onto the IRU-O module. Align breach of bracket with direction of plug (Figure 3-17). and ensure that the attachment plate is fully inserted into the bracket (Figure 3-18). Rotate clockwise and hear the spring snapping (Figure 3-19). Ensure that the IRU-O module is properly installed.

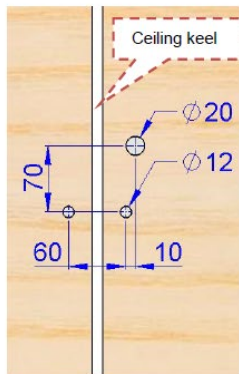


Figure 3-13

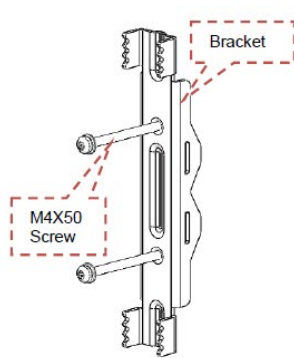


Figure 3-14

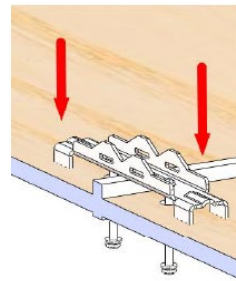


Figure 3-15

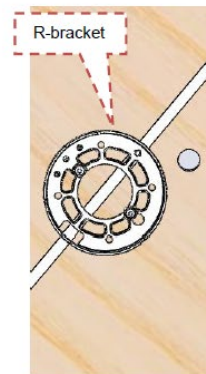


Figure 3-16

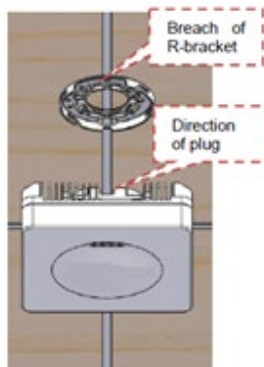


Figure 3-17

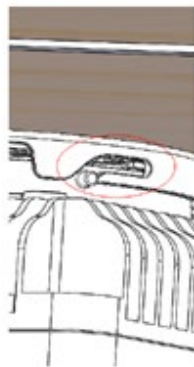


Figure 3-18

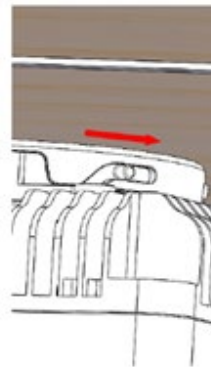


Figure 3-19

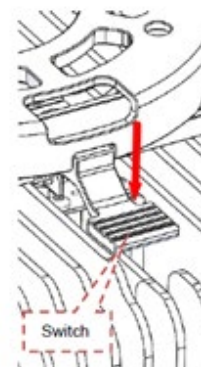


Figure 3-20

For Ceiling B Applications (Accessories for this installation must be purchased separately)

Step 1. Select an area for installation near ceiling. Drill the square holes per (Figure 3-21). Use the Screw(M4X12) to cross the pore plate and IRU-O module (Figure 3-22). Use metal wire mount the beam onto the ceiling keel (Figure 3-23). Use the Screw(M4X12) to tighten the pore plate and beam (Figure 3-24)

Step 2. Connect the power cable and the fiber cable onto the IRU-O module.

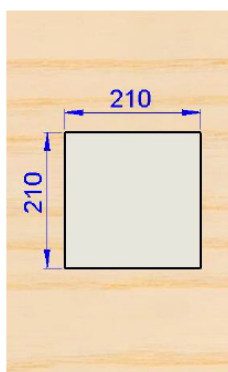


Figure 3-21

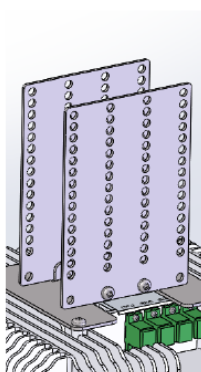


Figure 3-22

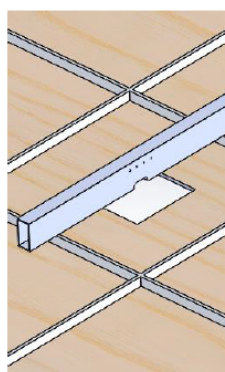


Figure 3-23

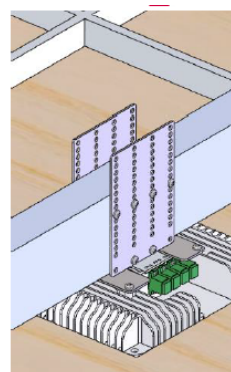


Figure 3-24

3.2.4.2 For Pole or Mast Applications

Step 1. Use the Screw(M4X12) to cross the bracket and fastener, use torque screwdriver to tighten the screw to the 1.4N.m (Figure 3-25). Insert hose clamps thru fastener and around pole (Figure 3-26). Tighten hose clamps to 5.5 Nm torque.

Step 2. Connect the power cable and the fiber cable onto the IRU-O module. Align breach of bracket with direction of plug (Figure 3-27). and ensure that the attachment plate is fully inserted into the bracket. Rotate clockwise and hear the spring snapping (Figure 3-28/29). Ensure that the IRU-O module is properly installed.

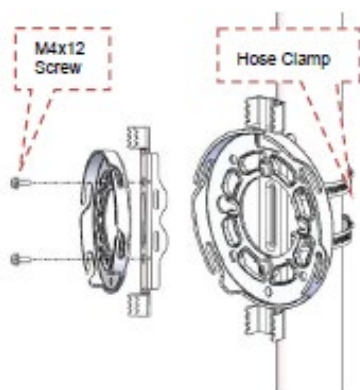


Figure 3-25



Figure 3-26

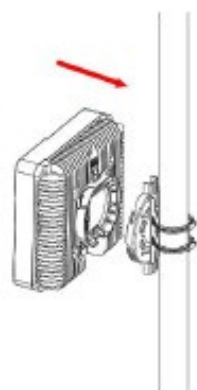


Figure 3-27

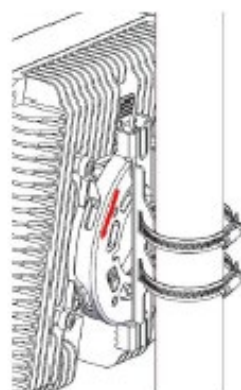


Figure 3-28



Figure 3-29

3.2.4.3 For Wall Applications

Step 1. Select an area for installation that is at least 2 meter above ground level or floor. Drill four holes per (Figure 3-30). Install expansion bolts into each of the pre-drilled holes (Figure 3-31). Place bracket over the 4 expansion bolts and affix using screw(M4X50) (Figure 3-32).

Step 2. Connect the power cable and the fiber cable onto the IRU-O module. Align breach of bracket with direction of plug (Figure 3-33). and ensure that the attachment plate is fully inserted into the bracket. Rotate clockwise and hear the spring snapping (Figure 3-34). Ensure that the IRU-O module is properly installed.

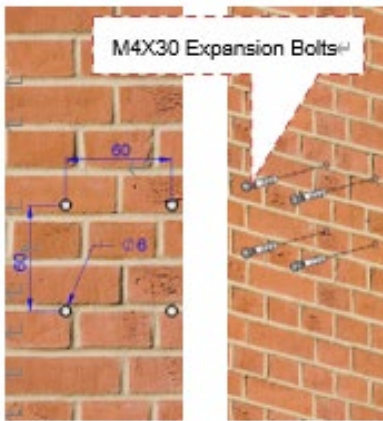


Figure 3-30



Figure 3-31



Figure 3-32



Figure 3-33



Figure 3-34



Figure 3-35

Remove Steps

Hold the IRU-O module in front and back with both hands, use index or middle finger to press the switch and keep the switch open. Rotate the IRU-O module counterclockwise and remove the IRU-O module.

Line Diagram

1. Insert power line plug into socket (Figure 3-37), red wire is positive, black wire is negative. (Figure 3-38)
2. Insert power line into copper pipe, then press flat copper pipe with vise, finally intertwine copper pipe with electrical tape (Figure 3-39 ~ Figure 3-46, Figure 3-47 ~ Figure 3-53).
3. Welding two optical fiber together with equipment.

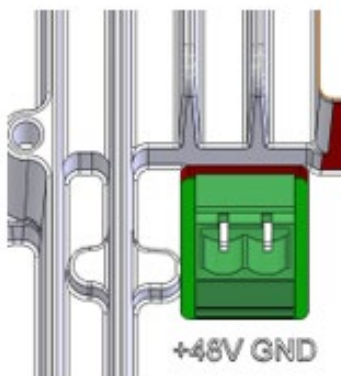


Figure 3-36

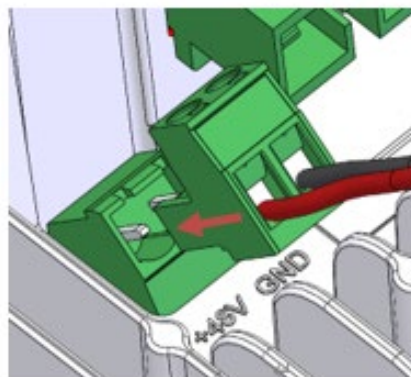


Figure 3-37

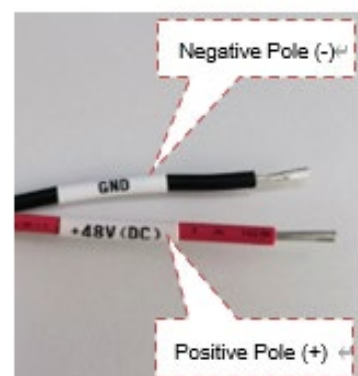


Figure 3-38

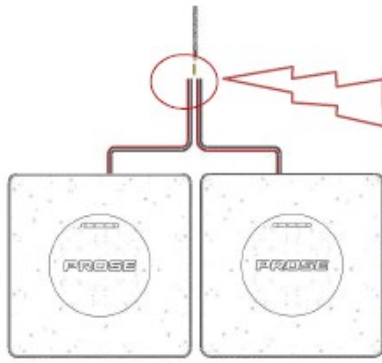


Figure 3-39

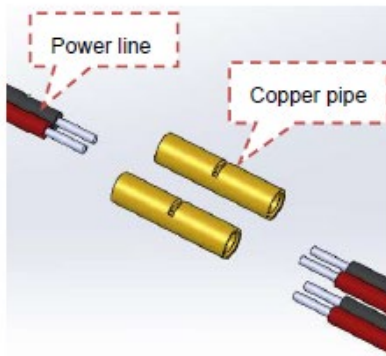


Figure 3-40

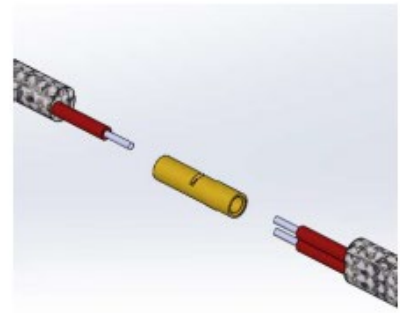


Figure 3-41

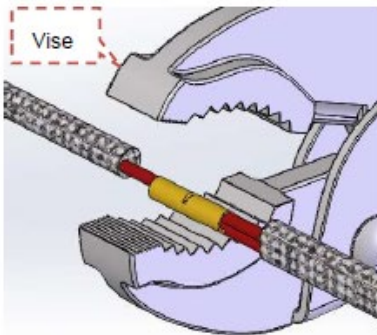


Figure 3-42

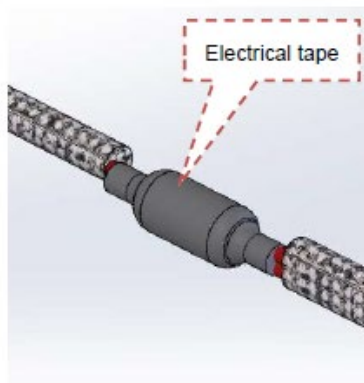


Figure 3-43

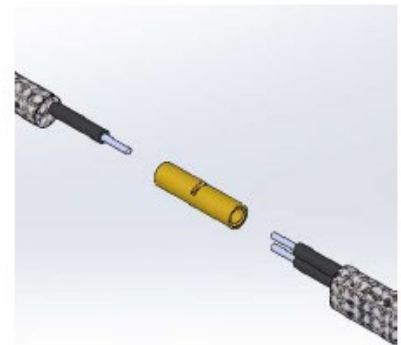


Figure 3-44

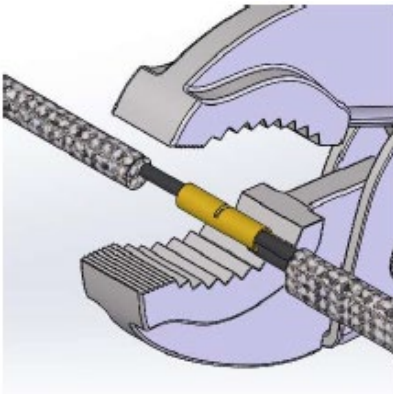


Figure 3-45

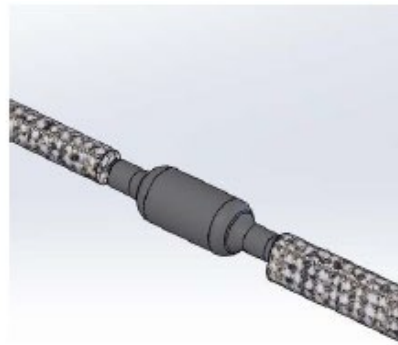


Figure 3-46

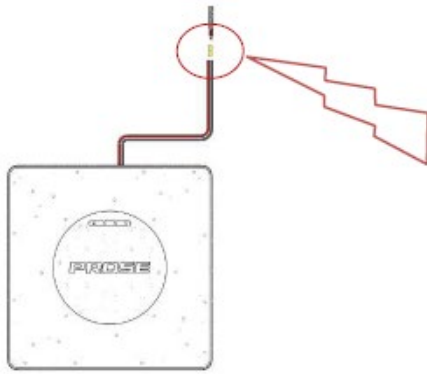


Figure 3-47

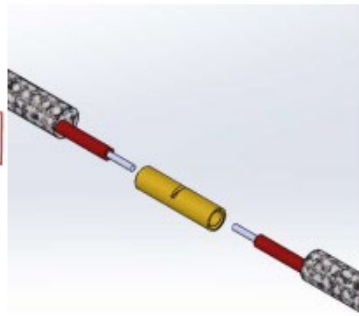


Figure 3-48

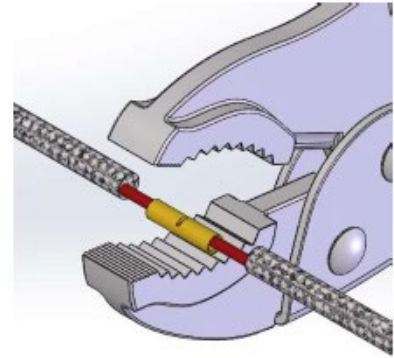


Figure 3-49

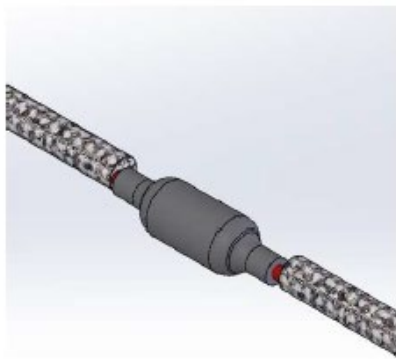


Figure 3-50

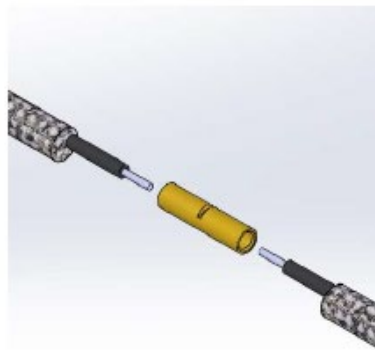


Figure 3-51

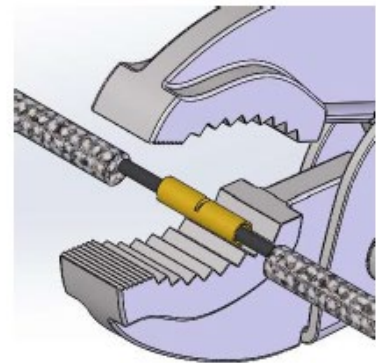


Figure 3-52



Figure 3-53

3.3 Installation standard

3.3.1 Device installation

1. The installation position should ensure that there is no interference from strong electric, strong magnetic and corrosive equipment.
2. The installation site should be dry with little dust and good ventilation.
3. The installation should be firm and smooth, and the installation should be fixed with the corresponding installation parts.
4. The mainframe power cable should be installed in the online slot.
5. The ground wire of equipment is earthed to the nearest grounding net from equipment, and the grounding terminal must be welded firmly.

3.3.2 Jumper and connector

1. It is required that the line should be firm and parallel wiring. The jumper stick to the wall.
2. PVC pipe should be used for jumper running. Keep the line straight horizontally and separate line. Use a plastic pipe card when fixing the wall.
3. The jumper connector must be installed firmly, and the special head tool should be used correctly. Never loosen the joint. Make sure that the contact is good, and the waterproof seal is done.

3.3.3 Power source

1. The power supply of the equipment must be a separate power supply.
2. The power cable should be straight and neat without sharp bending and uneven.
3. The power cable must be put through iron pipe or PVC pipe according to the design requirements. No connection should be made to the power cord through the pipe.
4. Power ground wire and protection ground wire should be laid separately from ac middle.
5. The grounding wire should be connected to the building's integrated grounding grid.
6. Good contact is required, and no looseness is allowed, and the contact surface should be coated with anti-oxidant.

3.3.4 The patch cord

1. The patch cord should be protected by routing pipe, and the part without routing pipe should be tied with Nylon Cable Ties.
2. When fixing the patch cord, it is recommended to wrap the outside of the patch cord around the nylon adhesive tape, and then use the Nylon Cable Ties to fix it.
3. The long patch cord should be coiled in the box or fixed in a circle.
4. The patch cord should be protected by protective sleeve.
5. The patch cord should have a small allowance at the elbow.
6. The patch cord should not be twisted after laying.

3.3.5 Fiber connection between IM2U to NEU to IRU-O

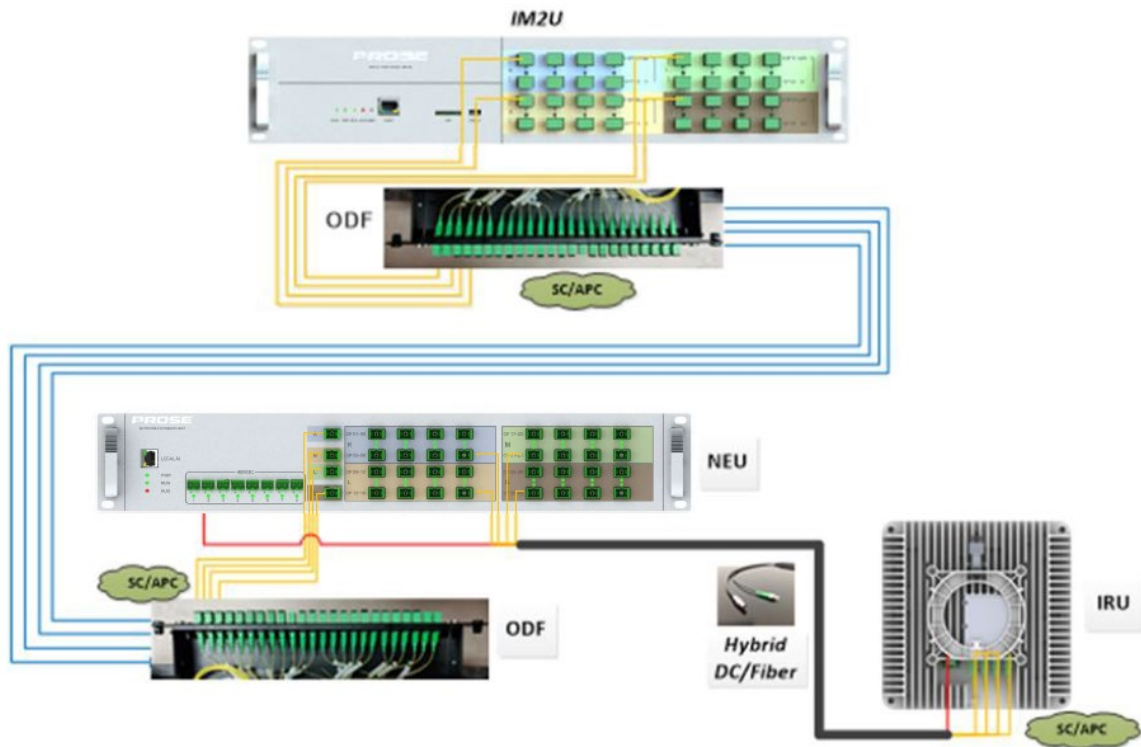


Figure 3-54 Fiber connection between IM2U to NEU to IRU-O

3.3.5.1 Ports introduction

3.3.5.1.1 CU

PROSE CU (Combiner Unit) is used with IM2U Input power range: 37 - 46 dBm.

CU used with IM2U: 8 input (4.3-10 female) and 8 output (SMA female), support 698-3800 MHz. Input ports1~4 is a group, Input ports5~8 is the other. One group of ports can only used for one band. For example, input ports1~4 are all used for band 78 (3300-3800 MHz). The input ports1~4 are combined to output ports1~4, ports5~8 are same.

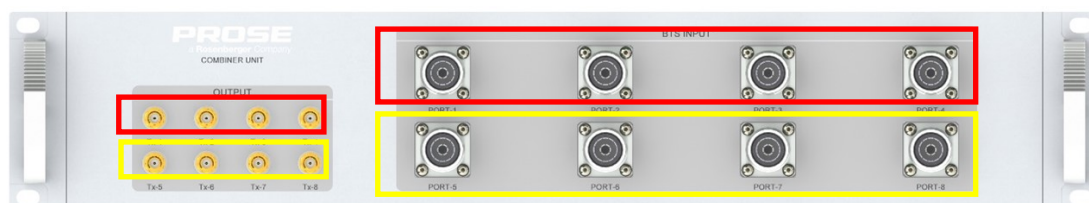


Figure 3-55 Front panel of CU

3.3.5.1.2 IM2U

In 4T4R mode, one IM2U can support up to 8 NEUs. There are 4 areas at the front panel of IM2U: A/B/C/D, each area has 8 optic ports. The optic ports at the corresponding location of each area are connected to the same NEU.

The channel ports on the back panel of IM2U are connected with the combiner units which are used to combine the signal of the operators. The frequency bands of all channel ports are fixed.

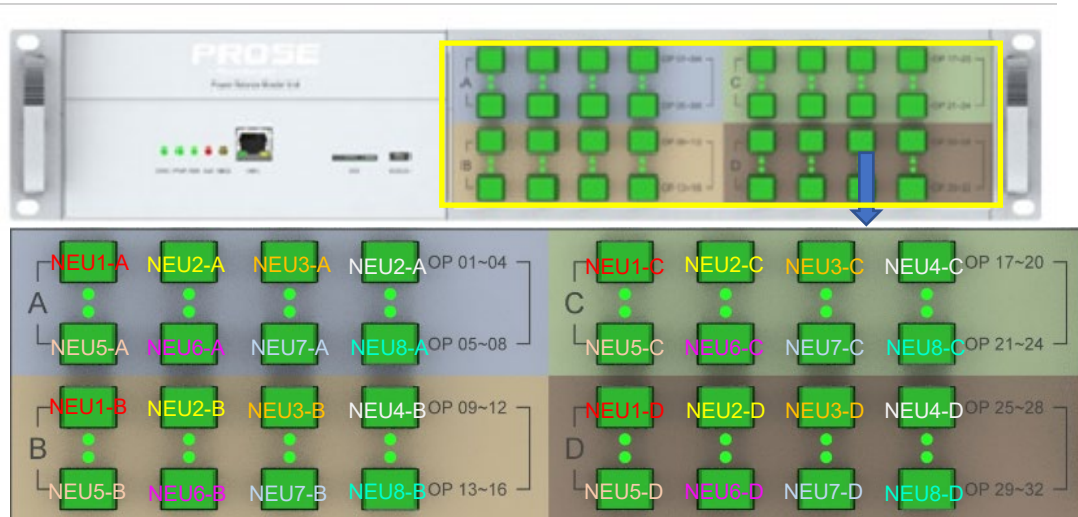


Figure 3-56 Front panel of IM2U

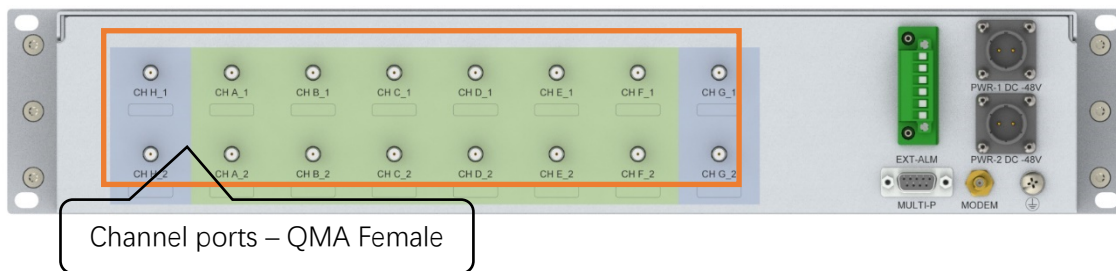


Figure 3-57 Back panel of IM2U

3.3.5.1.3 NEU

In 4T4R mode, one NEU can support up to 8 IRUs. There are 4 areas at the front panel of NEU: K/L/M/N, each area has 8 optic ports. The optic ports at the corresponding location of each area are connected to the same IRU.

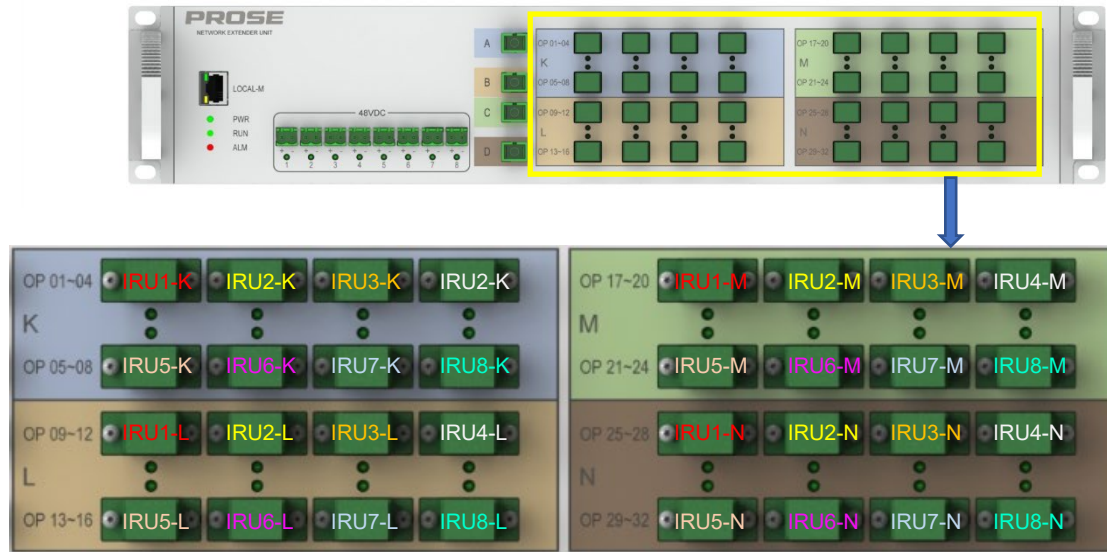


Figure 3-58 Front panel of NEU

3.3.5.2 RF Connections between IM2U and BTS

The maximum operation power of each input port on the back panel of the IM2U is 10 dBm. But normally the BTS output power is much higher, so the combiner unit is used to reduce the power to the acceptable range of IM2U.

Here use the connections between BTS-N78-4T4R and IM2U as an example, assume that there are three operators:

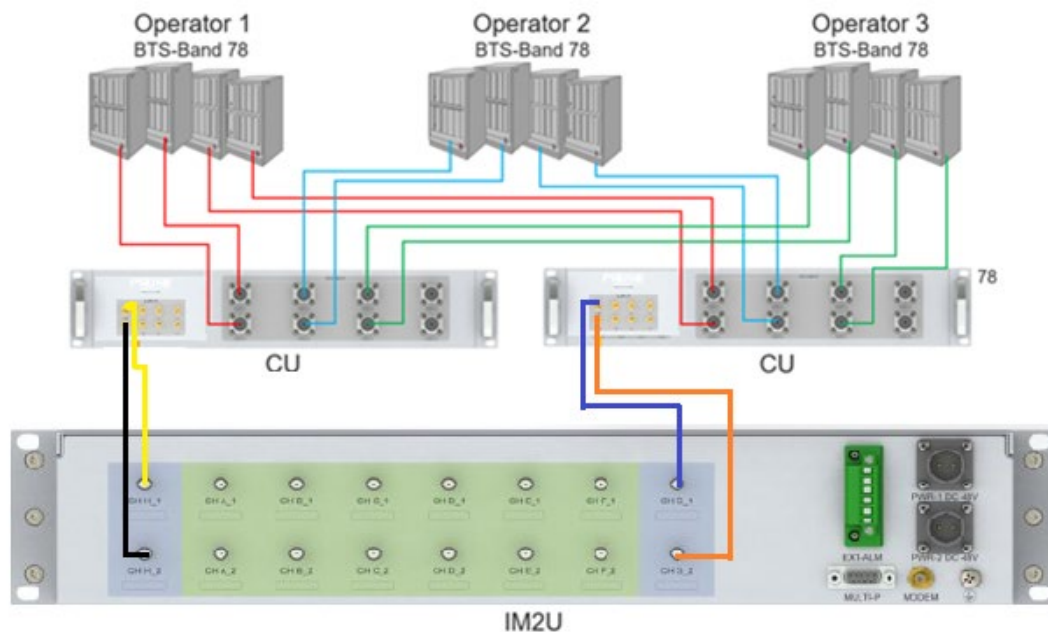


Figure 3-59 RF connection between IM2U and BTS

The unused SMA ports of the CU must be attached with terminal loads:



Figure 3-60 CU terminal load

3.3.5.3 Fiber Connections between IM2U and NEU

Here use the connection between IM2U and NEU as an example:

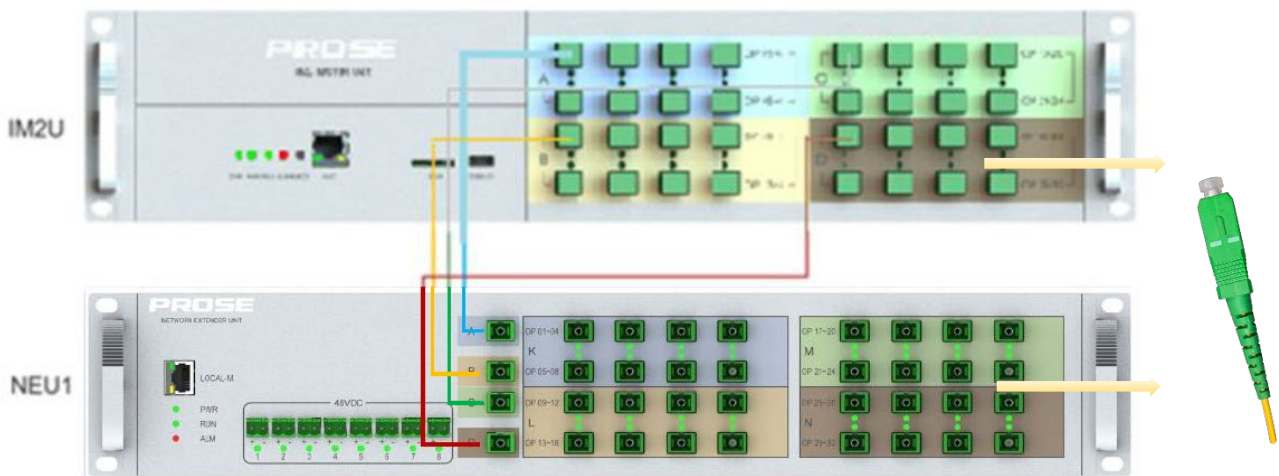


Figure 3-61 Fiber connection between IM2U and NEU

3.3.5.4 Connections between NEU and IRU

Here use the connection between NEU and IRU as an example:

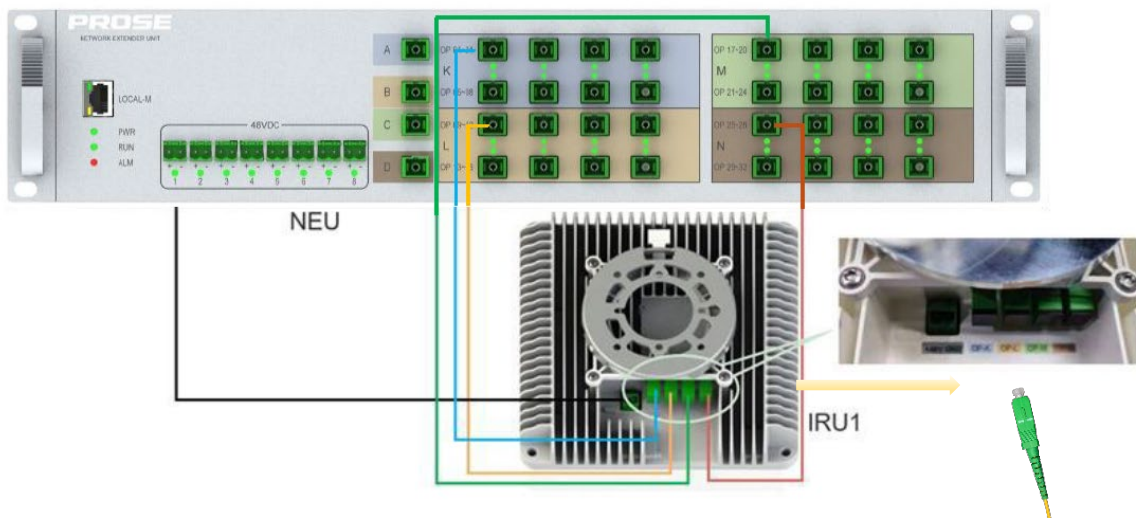


Figure 3-62 Connection between NEU and IRU

4. Device configuration

4.1 PC configuration

Connect the PC with IM2U via Ethernet cable.

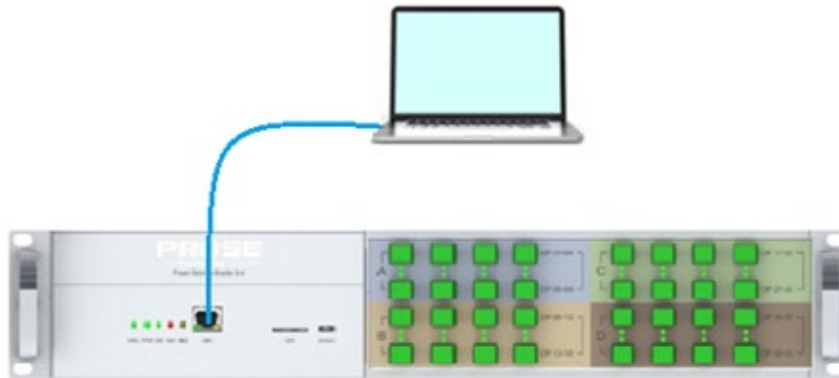


Figure 4-1 Connection PC with IM2U

Configure your computer's IPv4 address.

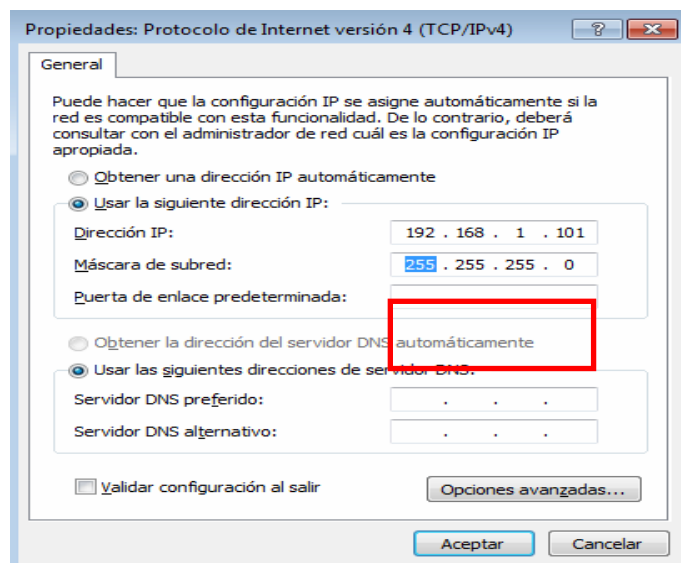


Figure 4-2 Config IPV4 address

Open the browser and enter 192.189.1.100 in the address bar.

Username: admin

Password: 123456

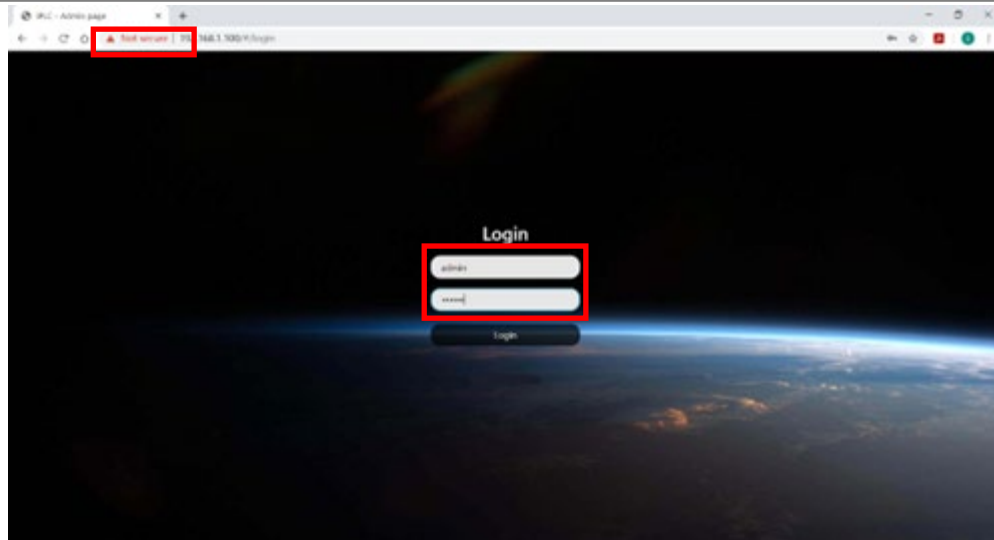


Figure 4-3 Login the OMT

4.2 Parameter description

4.2.1 IM2U

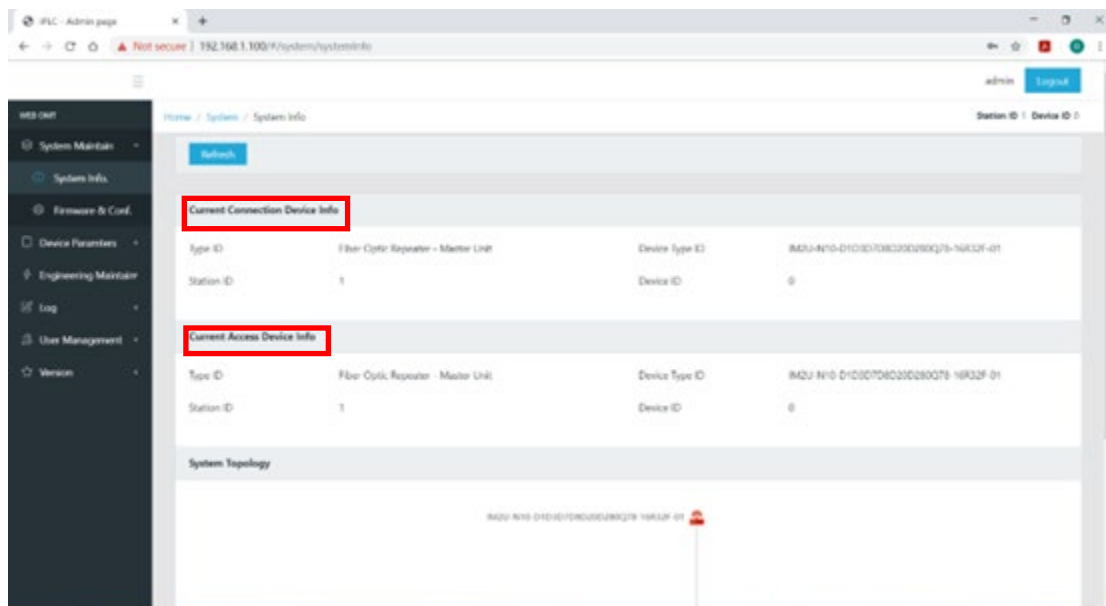


Figure 4-4 IM2U connection

Current Connection Device Info.:

It shows the devices that are currently connected with an Ethernet cable.

Current Access Device Info.:

It shows the device whose parameters are actually being viewed.

Firmware: Support download/upgrade

Device control: Support turn on/off and restart by software

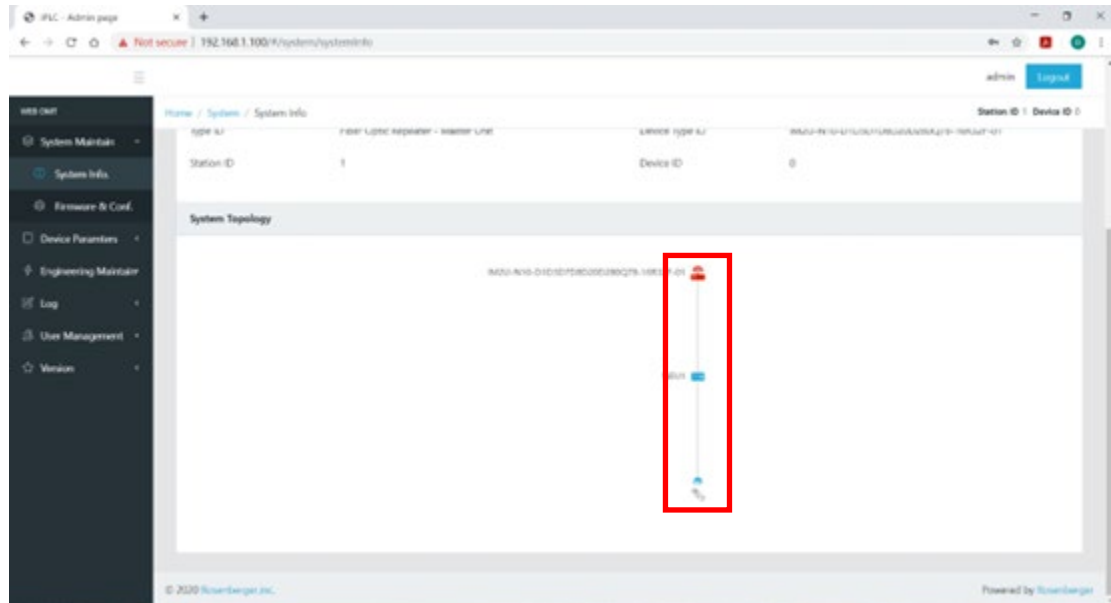


Figure 4-5 system config

Click the icon to switch access to the device.

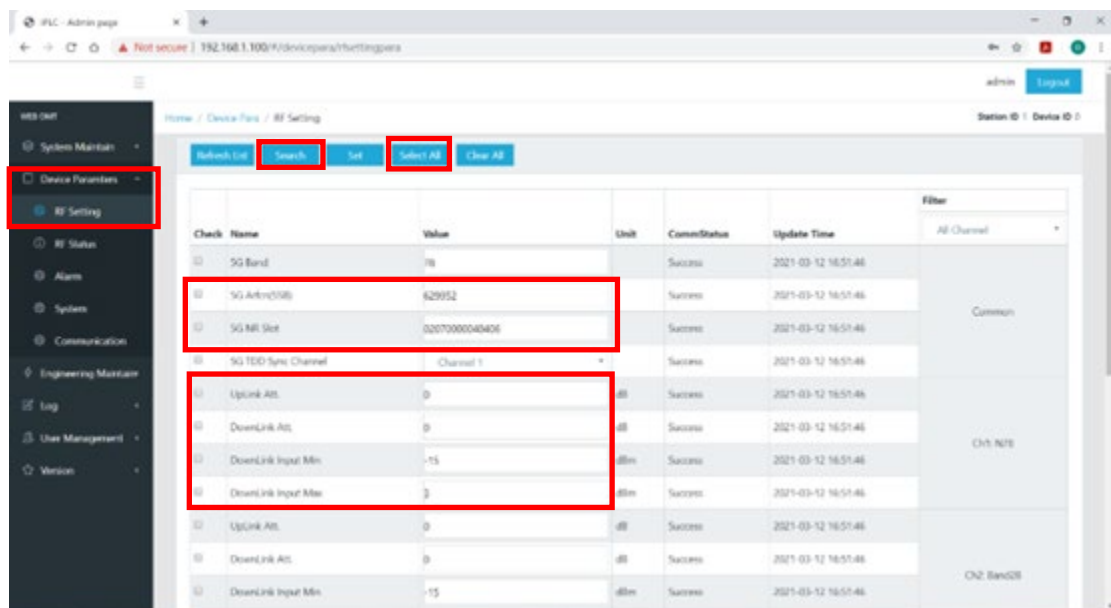


Figure 4-6 IM2U parameter check

Click **Device Parameters**.

Click **Select All**, then **Search**.

Configure **5G ARFCN** and **5G NR Slot** according to the actual configuration of the operator.

Uplink Att.: Set attenuation for uplink, range: 0 ~ 15 dB

Downlink Att.: Set attenuation for downlink, range: 0 ~ 15 dB

Downlink Input Min: Set minimum threshold value of downlink. There will be alarm if the actual power is lower.

Downlink Input Max: Set maximum threshold value of downlink. There will be alarm if the actual power is higher.

Temperature threshold: Set maximum threshold value of temperature. There will be alarm if the actual temperature is higher.

Power Supply: There will be alarm if the no power input

Configuration instruction of **5G NR Slot:**

- | | | | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | A | B | C | D |
| <ul style="list-style-type: none"> ▪ Numbers of slots in the first uplink slot ▪ Numbers of slots in the first downlink slot ▪ Numbers of slots in the second uplink slot ▪ Numbers of slots in the second downlink slot ▪ Number of uplink symbols in special subframes ▪ Number of guard period symbols in special subframes ▪ Number of downlink symbols in special subframes | ↑ | | ↑ | | ↑ | | ↑ | | ↑ | | ↑ | | ↑ | |

Note: If NR uplink and downlink are configured as single time slot, the second time slot is configured as 0000.

Check	Name	Value	Unit	CommStatus	Update Time
OP 1 Rx Power		2.5	dBm	Success	2021-03-12 16:57:11
OP 2 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 3 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 4 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 5 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 6 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 7 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 8 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 9 Rx Power		5	dBm	Success	2021-03-12 16:57:11
OP 10 Rx Power			dBm	Low	2021-03-12 16:57:11
OP 11 Rx Power			dBm	Low	2021-03-12 16:57:11

Figure 4-7 IM2U optical RX power check

Optical Rx Power: The optical power received from NEU (normal range: ≥ -2 dBm).

Item	Value	Unit	Status	Time	Station ID	Device ID
OP A Tx Power	-5.3	dBm	Success	2021-03-12 16:58:30	Common	
OP B Tx Power	-3.5	dBm	Success	2021-03-12 16:58:30		
OP C Tx Power	-4	dBm	Success	2021-03-12 16:58:30		
OP D Tx Power	-3.5	dBm	Success	2021-03-12 16:58:30		
SG TXRX	-2	dB	Success	2021-03-12 16:58:30		
SG RXRX	57	dBm	Success	2021-03-12 16:58:30		
Downlink Input	-11	dBm	Success	2021-03-12 16:58:30	Ch1: N79	
Downlink Input		dBm	Low	2021-03-12 16:58:30	Ch2: Band08	

Figure 4-8 IM2U optical TX power check

Optical Tx Power: The optical power transmitted by IM2U.

(A_Tx ~ D_Tx: -6 ± 2 dBm)

Downlink Input: The downlink input RF power received from CU.

4.2.2 NEU

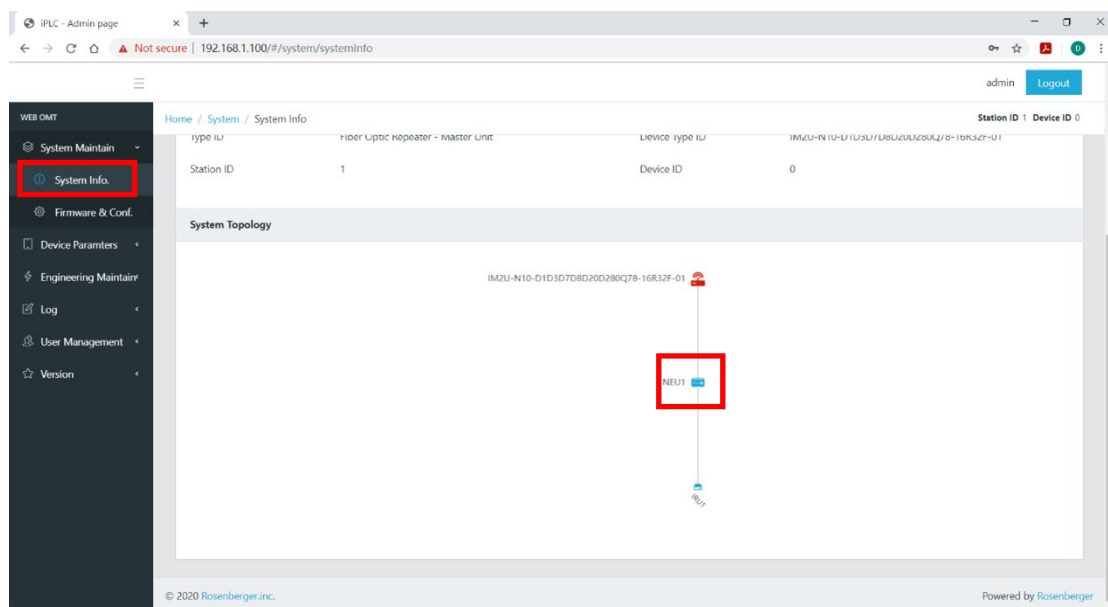


Figure 4-9 System information

Click **System Info.** and switch access to NEU.

The front panel of the PROSE Network Extender Unit features a status section on the left with three LEDs: PWR (green), RUN (green), and ALM (red). Below these is a 48VDC power input section with eight terminals labeled 1 through 8. The main body of the unit contains a grid of 16 ports arranged in four rows (A, B, C, D) and four columns. Each port has a green status LED and a label: A01-04, K, B05-08, C09-12, L, D13-16, OP17-20, M, OP21-24, OP25-28, N, and OP29-32. The ports are color-coded by row: Row A is light blue, Row B is light green, Row C is light orange, and Row D is light brown.

PDU Channel Working Current: The working current for every channel on the PDU. Maximum support 8 IRUs (4T4R mode).

The screenshot shows the iPLC Admin page. The browser address bar displays '192.168.1.100/#/system/systeminfo'. The left sidebar contains a menu with 'System Maintain' and 'System Info' highlighted. The main content area is titled 'System Info' and shows a table with the following data:

Station ID	Device ID
1	0

Below the table is a 'System Topology' diagram showing a fiber optic repeater (IM2U-N10-D1D3D7D8D20D28QZ78-16R32F-01) connected to a device (IM2U-N10-U1U3U1U8U2U0U28U0U78-16R32F-01). The device is highlighted with a red box.

At the bottom of the page, there is a copyright notice: '© 2020 Rosenberger, Inc.' and a power source indicator: 'Powered by Rosenberger'.

46

Click **System Info.** and switch access to NEU.

Check	Name	Value	Unit	CommStatus	Update Time	Filter
☐	IRU 1 Temp. Threshold	90	°C	Success	2021-03-12 17:07:51	Common
☐	IRU 1 PA Switch	ON		Success	2021-03-12 17:07:51	Ch1: N78
☐	IRU 1 Uplink Att.	0	dB	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Att.	0	dB	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Output Min	5	dBm	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Output Max	26	dBm	Success	2021-03-12 17:07:51	Ch2: N78
☐	IRU 1 PA Switch	ON		Success	2021-03-12 17:07:51	
☐	IRU 1 Uplink Att.	0	dB	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Att.	0	dB	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Output Min	5	dBm	Success	2021-03-12 17:07:51	
☐	IRU 1 Downlink Output Max	26	dBm	Success	2021-03-12 17:07:51	

Figure 4-15 IRU parameters

IRU PA Switch: The switch of power amplifier module of IRU.

IRU Uplink Att.: Set attenuation for IRU uplink, range: 0 ~ 15 dB.

IRU Downlink Att.: Set attenuation for IRU downlink, range: 0 ~ 15 dB.

IRU Downlink Output Min: Set minimum threshold value of downlink. There will be alarm if the actual power is lower.

IRU Downlink Output Max: Set maximum threshold value of downlink. There will be alarm if the actual power is higher.

+

IPLC - Admin page

Not secure | 192.168.1.100/#/devicepara/rfstatuspara

☆

🔴

🟢

⋮

admin Logout

Home / Device Para / RF Status

Station ID 1 Device ID 1 Sub Device ID 1

WEB OMT

System Maintain

Device Parameters

RF Setting

RF Status

Alarm

System

Communication

Engineering Maintain

Log

User Management

Version

Refresh List

Search

Set

Select All

Clear All

Check	Name	Value	Unit	CommStatus	Update Time	Filter
☐	IRU 1 Temp.		°C	None		Common
☐	IRU 1 OP K Rx Power		dBm	None		
☐	IRU 1 OP L Rx Power		dBm	None		
☐	IRU 1 OP M Rx Power		dBm	None		
☐	IRU 1 OP N Rx Power		dBm	None		
☐	IRU 1 OP K Tx Power		dBm	None		
☐	IRU 1 OP L Tx Power		dBm	None		
☐	IRU 1 OP M Tx Power		dBm	None		
☐	IRU 1 OP N Tx Power		dBm	None		
☐	IRU 1 Downlink Output		dBm	None		
☐	IRU 1 Downlink Output		dBm	None		

Figure 4-16 IRU status

IRU Temp.: The temperature of IRU.

IRU Optical Rx Power: The optical power received from NEU.

IRU Optical Tx Power: The optical power transmitted to NEU.

Downlink Output: The downlink output of radio frequency for every channel.

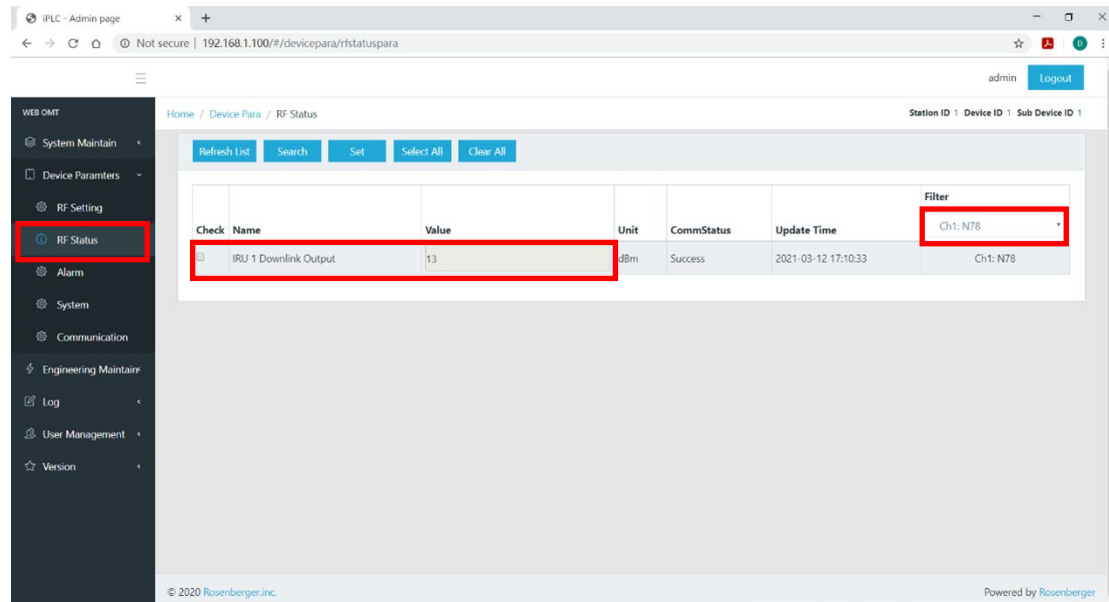


Figure 4-17 IRU RF status

Check the downlink output of the channels at page **RF Status**.

5. Support and service

5.1 Type of Service

We provide Repeater warranty of 24 months that will start from date of delivery at Purchaser warehouse. Any faulty card or entire Repeater will have to be repaired and replaced with new part and this will be covered under the Warranty services. Four types of support and maintenance services will be provided: Remote technical support, on-site technical support, spare parts service and field technical training.

5.1.1 Remote technical support

PROSE can provide technical inquiries and troubleshooting for free by telephone, network, fax or email within twelve hours. We can also share good technology and experience with customs.

5.1.2 On-site technical support

According to the customer's request, PROSE can promise to arrange visa as fast as possible. After getting visa, we can arrive at the site in one week and solve the breakdown.

5.1.3 Spare parts service

According to the customer's request, PROSE will provide 1~5% spare parts (decided by different products).

5.1.4 Field technical training

According to the customer's request, PROSE will provide a field technical training and remote technical training for customer's technical engineer.

5.2 Contact us

PROSE Technologies (Suzhou) Co., Ltd

Add: No. 6, Shen'an Road, Dianshanhu, Suzhou, Jiangsu 215345, China

Tel: (+86 512) 86896789